

SAFETY NOTE


- Read the instructions carefully before use
- Keep these instructions for as long as you use the appliance.
- Assembly and maintenance are reserved for qualified persons who can work on products that must be manually connected to 230V current
- Before any assembly action, cut off the power supply
- Connect the earth cable first.
- The flexible outer cable of this luminaire cannot be replaced; if the cable is damaged, the luminaire must be destroyed.
- Caution, risk of electric shock when opening the product. ⚠
- This source has an integrated power supply, just connect the source to a 220-230VAC electrical input to make it work.
- The integrated aspect of the power supply has an impact on the design of the source and its installation and use.
- For the source with an integrated power supply, the design is subject to ventilation issues related to the cooling of an integrated power supply
- This type of light source can be larger and heavier than a source with a remote power supply
- The terminal block is not included; the installation may require the advice of a qualified person
- Source designed for direct installation on normally flammable surfaces
- Do not look at the source in normal use for more than 10 seconds as this can be dangerous for the eyes.
- The light source should be positioned in such a way that prolonged gaze of the luminaire at a distance of less than 0.2 m is not possible.
- This product meets all the essential requirements of each of the directives applicable to it.
- At the end of its life, this product must be collected separately and must not be mixed with other household waste to respect the health and safety of people and to conserve natural resources.

MODE DYNAMIQUE / DYNAMIQUE MODE SHEET

Nombre Number	Mode dynamique Dynamic mode	Luminosité - Saturation - Vitesse Brightness - Saturation - Speed
1	Profusion agitée / Riotous Profusion	Ajustable Adjustable
2	Ciel bleu / Blue sky	
3	Couleur magnifique / Gorgeous color	
4	Océan / Ocean	
5	Onirique / Dreamlike	
6	Noël / Christmas	
7	Forêt / Forest	
8	Anniversaire / Birthday	
9	Floraison / Blooming	

TÉLÉCOMMANDE / CONTROL REMOTO

- RF 2.4G remote control, 16 million color changing, saturation control.
- Products equipped with the function retransmit signals 4 zones of the remote control at maximum 30m, including when an area is off by the remote control.

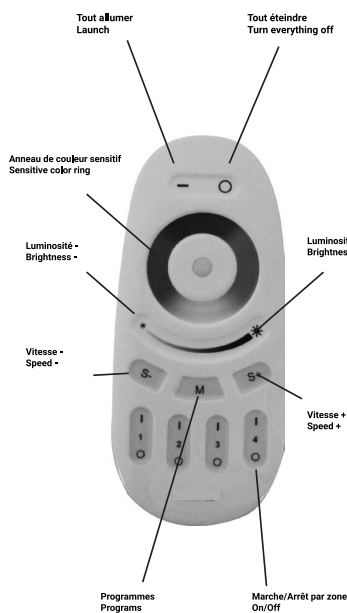

1. Long press "Master OFF" or "Zone OFF" to night light mode.
2. Long press "Master ON" or "Zone ON" to white light mode(100% brightness).
3. Touch "Color Ring" to change the colors.
4. Under white light mode, touch "Speed+" and "Speed-" to change color temperature.
5. Under color light mode, touch "Speed+" and "Speed-" to change color saturation.
6. Under Dynamic mode, touch "Speed+" and "Speed-" to change speed.


Link: First power off, then power on, within 3 seconds touch any of the Zone-ON button one times shortly, the link is done when you see the light blinks 3 times with green color, otherwise try again later.

Unlink: First power off, then power on, within 3 seconds long touch the linked Zone-ON button or the Master-ON button ,the unlink is done when you see the light blinks 10 times with red color, otherwise try again later.


100686, 100687, 100688, 100689, 100690

INSTRUCTIONS DE LIAISON / LINKING INSTRUCTIONS

Remarque : La lumière peut fonctionner après la liaison avec la télécommande.
Remark : The light can be working after linking with the remote controller.

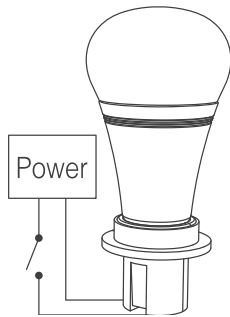


1. Switch off the light, after 10 seconds switch on again.

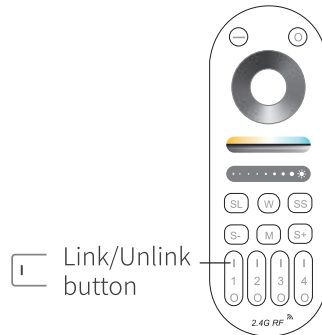

Link/Unlink button

2. When the light on, short press any zone of "I" 3 times within 3 seconds

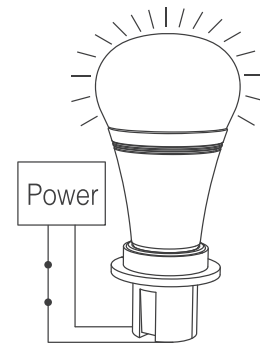


3. The light blink 3 times slowly means the linking is done successfully.




If the light not blink slowly, the linking failed. Switch off the light again, and follow the above steps again.

INSTRUCTIONS DE DISSOCIATION / UNLINKING INSTRUCTIONS

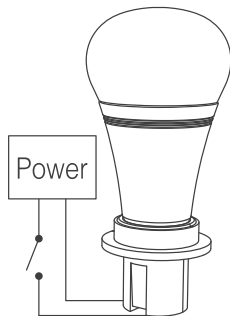


1. Switch off the light, after 10 seconds switch on again.

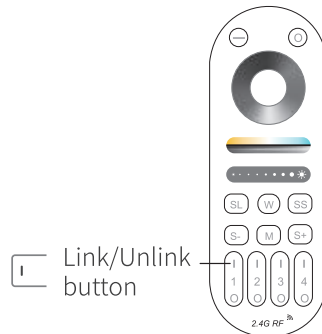

Link/Unlink button

2. When the light on, short press "I" 5 times within 3 seconds. **Unlinking must be the same zone with the Linking.**

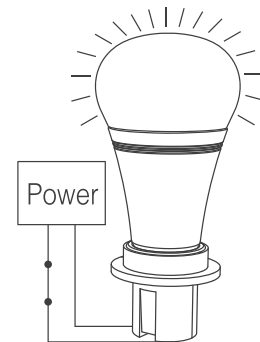

3. The light blinking 10 times quickly, means the unlinking successfully.



If the light not blink quickly, the unlink failed. Switch off the light again and follow the above steps to unlink again.

Environmental Protection (W.E.E.E.) – Aurora's WEEE Reg.No. WEE/BG0130YX (UK Only)

 Waste Electrical & Electronic Equipment Regulations (WEEE) requires that any of our products showing this marking (left) must not be disposed of with other household or commercial waste. Aurora does not levy any WEEE disposal charges to its customers for affected WEEE related products. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate any such product from other waste types and recycle it responsibly at your local facilities. Check with your Local Authority, Recycling Centre or retailer for recycling advice. If, when you purchased any Aurora product, your supplier included a WEEE disposal fee, you should then contact your supplier for advice on his take back of the product for the correct disposal.

GUARANTEE

This product is guaranteed for a period of 3 years from the date of purchase. The guarantee is invalid in the case of improper use, installation, tampering, and removal of the Q.C. date label, installation in an improper working environment or installation not according to the current edition of the National Wiring Regulations. Should this product fail during the guarantee period it will be replaced free of charge, subject to correct installation and return of the faulty unit. Aurora does not accept responsibility for any installation costs associated with the replacement of this product. This warranty is in addition to the statutory rights in your country of purchase. Aurora reserves the right to alter specifications without prior notice.

100686, 100687, 100688, 100689, 100690