
BELLlighting

Installation Instructions: Deco (06740-06795)

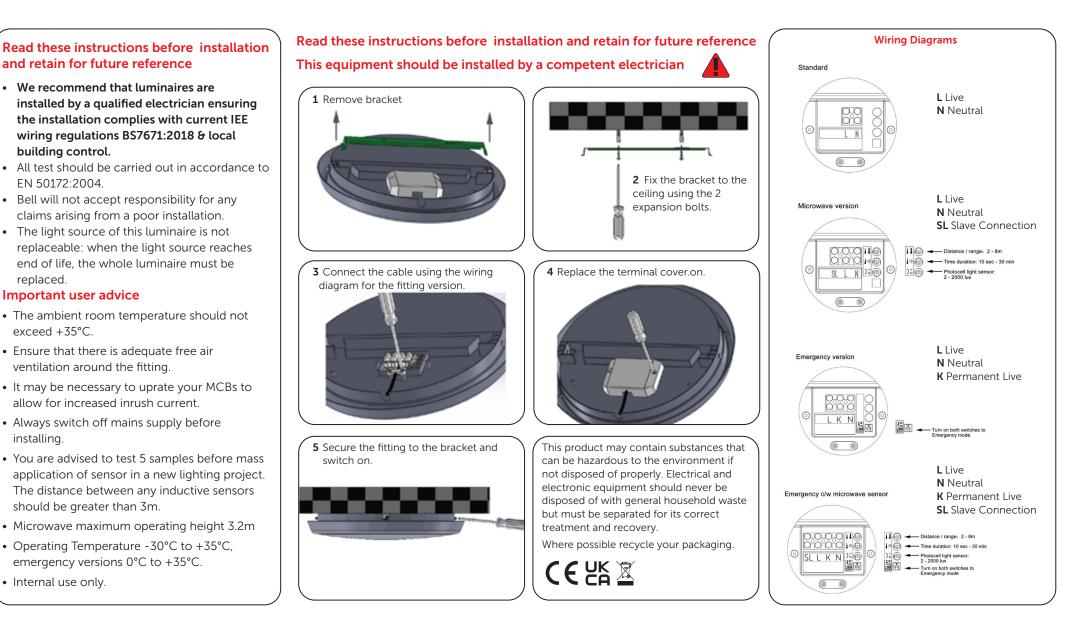

Technical Helpline +44 (0)1924 893380 www.**belllighting**.co.uk

British Electric Lamps Ltd, Unit A Foxbridge Way Normanton Ind Est, Normanton, West Yorkshire. WF6 1TN

T: +44 (0)1924 893380 F: +44 (0)1924 894320 E: sales@belllighting.co.uk


replaced.

installing.

exceed +35°C.

Date	Revision
1.6.2022	2

Installation Instructions: Deco (06740-06795)

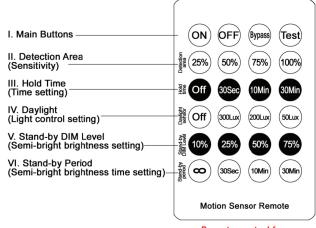

I. Main Buttons

Remote control for Corridor Dim versions only

ON OFF Bypass (Test

BELLlighting

On: Turn on the luminaire at max brightness

Off: Turn off the luminaire

Bypass : Activate or deacctivate sensor function

-- Press 'Bypass' the luminaire flashes 1 time, the sensor is activated.

-- Press 'Bypass' the luminaire flashes 3 times, the sensois deactivated. Test: Press it luminaire flashes 3 times to indicate in test mode. If self-test passed, luminaire flashes 3 more times.

II. Detection Area (Sensitivity)



When adjusting the sensitivity of the sensor refer to the above 4 buttons on the controller, a maximum distance of 8 meters can be detected when luminaire is mounted at a max height of 4m. (For ideal control function, mounted at a height of 3m is suggested.)

III. Hold Time (Time setting)



Off: Press 'Off' the luminaire jumps to stand-by brightness without holding any time.

Time can be set as 30s, 10min or 30min. Any movement detected before the elapsed time restarts the timer

IV. Daylight (Light control setting)



The chosen light response threshold can be chosen from: Off: Press this, the luminaire operat 300 Lux: The lumanaire turns on when environment lux is 300 lux or less 200 Lux: The lumanaire turns on when environment lux is 200 lux or less

50 Lux: The lumanaire trigger on when environment lux is 50 lux or less

V. Stand-by DIM Level



The setting is to adjust brightness level of the luminaire after hold tim

VI Stand-by Period



This setting is to adjust the length of time the lumanaire remains in the dimmed mode before completely switching off.

When set to ∞ the luminaire will permanently remain in dimmed mode until the sensor is triggered.

Stand by time can be set to 30s. 10 mins or 30 mins. Any movement detected before this time elapses will trigger the sensor.

Technical Helpline +44 (0)1924 893380 WWW.**belllighting**.co.uk British Electric Lamps Ltd, Unit A Foxbridge Way Normanton Ind Est, Normanton, West Yorkshire. WF6 1TN

T: +44 (0)1924 893380 F: +44 (0)1924 894320 E: sales@belllighting.co.uk





Installation Instructions: Deco (06740-06795)

Testing & Commissioning for Emergency Luminaire	Luminaire Ref/Location		In Case of difficulty, contact the Installation Engineers:-									
 Ensure the Load is connected. Connect the battery. Switch on the Unswitched Supply Check the Charge LED illuminates. Switch on the Maintained Supply Check the LED illuminates as normal. Switch off the Maintained Supply. Switch off the Unswitched Supply Check the Charge LED extinguishes and the load LED illuminates at a reduced output. Enter the commissioning date on the Battery Pack. Switch on the Unswitched Supply 	Full Recharge Time 24 Hours			Duration 3 Hours				Lamp Type - LED				
	ROUTINE TEST RECORD											
		Year 1		Year 2		Year 3		Year 4		Year 5		
	Monthly Test	Signed	Date	Signed	Date	Signed	Date	Signed	Date	Signed	Date	
	Functional											
	Functional											
	Functional											
	Functional											
	Functional											
	Functional											
	Functional											
	Functional											
	Functional											
	Functional											
	Functional											
	Three Hour											

Technical Helpline +44 (0)1924 893380 WWW.**belllighting**.co.uk British Electric Lamps Ltd, Unit A Foxbridge Way Normanton Ind Est, Normanton, West Yorkshire. WF6 1TN

T: +44 (0)1924 893380 F: +44 (0)1924 894320 E: sales@belllighting.co.uk