# BELL lighting

## Installation Instructions: LED Converter 06840

Date	Revision
1.6.2022	2


### Important Information

We recommend that luminaires are installed by a qualified electrician ensuring the installation complies with current IEE wiring regulations BS7671:2018 & local building control.

- All tests should be carried out in accordance to EN 50172:2004.
- BELL will not accept responsibility for any claims arising from a poor installation.
- Operating Temperature 0°C to +35°C.
- Do not cover with any insulation.

This product may contain substances that can be hazardous to the environment if not disposed of properly. Electrical and electronic equipment should never be disposed of with general household waste but must be separated for its correct treatment and recovery. Where possible recycle your packaging.



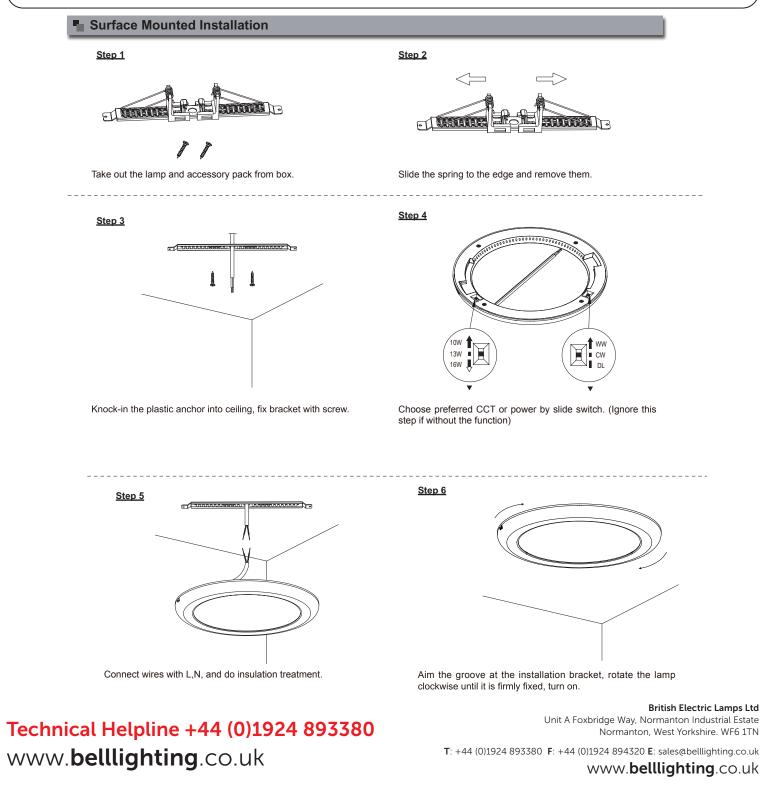



## Installation Instructions: LED Converter 06840

Date	Revision
1.6.2022	2


#### Important Information

We recommend that luminaires are installed by a qualified electrician ensuring the installation complies with current IEE wiring regulations BS7671:2018 & local building control.

- All tests should be carried out in accordance to EN 50172:2004.
- BELL will not accept responsibility for any claims arising from a poor installation.
- Operating Temperature 0°C to +35°C.
- Do not cover with any insulation.

This product may contain substances that can be hazardous to the environment if not disposed of properly. Electrical and electronic equipment should never be disposed of with general household waste but must be separated for its correct treatment and recovery. Where possible recycle your packaging.



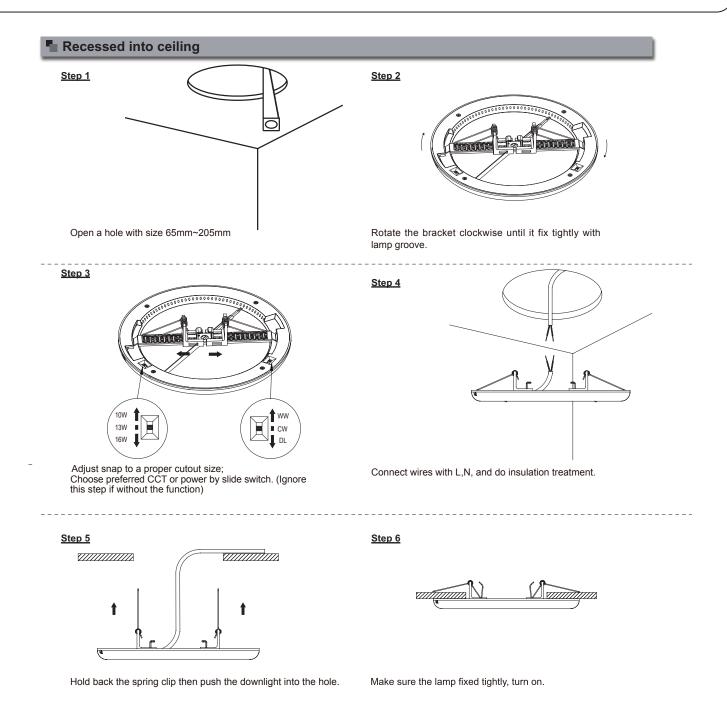

Technical Helpline +44 (0)1924 893380 www.belllighting.co.uk British Electric Lamps Ltd Unit A Foxbridge Way, Normanton Industrial Estate Normanton, West Yorkshire. WF6 1TN

T: +44 (0)1924 893380 F: +44 (0)1924 894320 E: sales@belllighting.co.uk

www.belllighting.co.uk