Date	Revision
1.6.2022	2

BELLlighting Installation Instructions: Linear High/Low Bay (08950-57)

Read these instructions before installation and retain for future reference

This equipment should be installed by a competent electrician

A. Wire Suspension Installation

Physical Dimensions(Unit: mm)

Important Information

We recommend that luminaires are installed by a gualified electrician ensuring the installation complies with current IEE wiring regulations BS7671:2018 & local building control.


- BELL will not accept responsibility for any claims arising from a poor installation.
- The light source of this luminaire is not replaceable: when the light source reaches end of life, the whole luminaire must be replaced.
- You are advised to test 5 samples before mass application of sensor in a new lighting project. The distance between any inductive sensors should be greater than 3m.
- Operating Temperature -30°C to +35°C, emergency versions 0°C to +35°C.
- Maximum PIR Sensor operating height 12m.
- Maximum Microwave Sensor operating height 15m.
- All tests should be carried out in accordance to EN 50172:2004.

Warning Before installation ensure power is disconnected


This product may contain substances that can be hazardous to the environment if not disposed of properly. Electrical and electronic equipment should never be disposed of with general household waste but must be separated for its correct treatment and recovery.

Where possible recycle your packaging.

(6 話 🗵

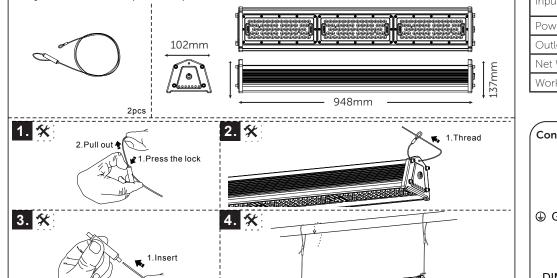

Technical Specification AC 100-240V (Non Input Voltage Sensor/Emergency) Power Frequency 50/60 Hz 948 x 137 x 102mm Outlook Dimensions Net Weight 5.7 Kg -30° to +35° C Working Temp

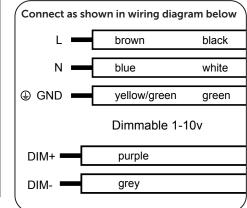

Dimming Function (Sensor Versions)








Detection Plan

With sufficient ambient light, the sensor does not switch on the lamp

With insufficient ambient light, the sensor switches on the lamp when motion is detected

After hold time, the sensor dims the lamp at a low light level if no new motion triager.

After stand-by period, the sensor switches off the lamp if no motion is detected in its detection zone.

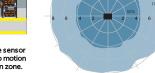

200W



Technical Helpline +44 (0)1924 893380 www.**belllighting**.co.uk

British Electric Lamps Ltd, Unit A Foxbridge Way Normanton Ind Est, Normanton, West Yorkshire. WF6 1TN

T: +44 (0)1924 893380 F: +44 (0)1924 894320 E: sales@belllighting.co.uk

Date	Revision
1.6.2022	2



Testing & Commissioning for Luminaire Ref/Location In Case of difficulty, contact the Installation Engineers:-**Emergency Luminaire** Tel: Ensure the Load is connected. Full Recharge Time 24 Hours **Duration 3 Hours** Lamp Type - LED Connect the battery. • ROUTINE TEST RECORD • Switch on the Unswitched Supply Year 5 - Check the Charge LED illuminates. Year 1 Year 2 Year 3 Year 4 Switch on the Maintained Supply Monthly Test Signed Signed Signed Date Signed Date Date Signed Date Date - Check the LED illuminates as normal. Functional Switch off the Maintained Supply. Switch off the Unswitched Supply Functional - Check the Charge LED extinguishes and the load LED illuminates at a reduced output. Functional • Enter the commissioning date on the Battery Pack. Functional Switch on the Unswitched Supply Functional Functional Functional Functional Functional Functional Functional Three Hour

Technical Helpline +44 (0)1924 893380 www.belllighting.co.uk

British Electric Lamps Ltd, Unit A Foxbridge Way Normanton Ind Est, Normanton, West Yorkshire. WF6 1TN

T: +44 (0)1924 893380 F: +44 (0)1924 894320 E: sales@belllighting.co.uk