

Installation Instructions: Sensor

Read these instructions before installation and retain for future reference. This equipment should be installed by a competent electrician

ician 🛕


Important Information

We recommend that luminaires are installed by a qualified electrician ensuring the installation complies with current IEE wiring regulations BS7671:2018 & local building control.

- BELL will not accept responsibility for any claims arising from a poor installation.
- The light source of this luminaire is not replaceable: when the light source reaches end of life, the whole luminaire must be replaced.
- Not suitable for petrochemical installations.
- Upgrading of MCB may be necessary
- You are advised to test 5 samples before mass application of sensor in a new lighting project. The distance between any inductive sensors should be greater than 3m.
- Microwave maximum operating height 3.2m

Warning Before installation ensure power is disconnected.

This product may contain substances that can be hazardous to the environment if not disposed of properly. Electrical and electronic equipment should never be disposed of with general household waste but must be separated for its correct treatment and recovery. Where possible recycle your packaging.

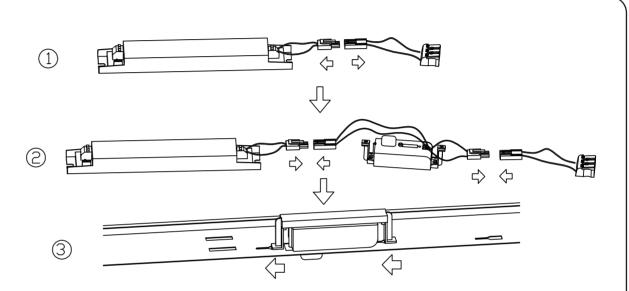

- 1. Disconnect the plug between the driver and the terminal.
- 2. Plug in the connectors with the sensor respectively.
- 3. Fix the sensor bracket on the remote.

Technical Helpline +44 (0)1924 893380 www.belllighting.co.uk

British Electric Lamps Ltd Unit A Foxbridge Way, Normanton Industrial Estate Normanton, West Yorkshire, WF6 1TN

T: +44 (0)1924 893380 F: +44 (0)1924 894320 E: sales@belllighting.co.uk