

# Installation Instructions: Batten Mount 1W **Emergency Pack For Battens Open Area Lens 09129**

Date	Revision
29.4.24	1

Read these instructions before installation and retain for future reference This equipment should be installed by a competent electrician



### Important Information

We recommend that luminaires are installed by a qualified electrician ensuring the installation complies with current IEE wiring regulations BS7671:2018 & local building control.

- BELL will not accept responsibility for any claims arising from a poor installation.
- Do not cover with any insulation.
- · Internal use only.

This product may contain substances that can be hazardous to the environment if not disposed of properly. Electrical and electronic equipment should never be disposed of with general household waste but must be separated for its correct treatment and recovery.

Where possible recycle your packaging.
















The emergency function test must be performed when a battery is fully charged over 16 /24hours

## Dimensions (mm)

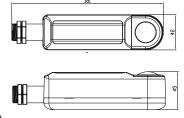

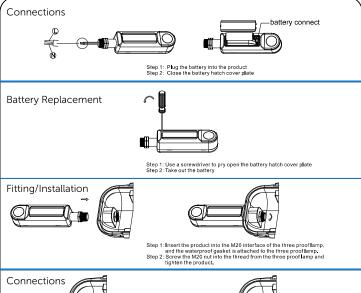

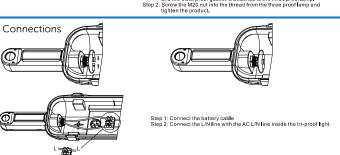

Ensure correct polarity of the battery

The drawing in the fitting may vary to the actual product, connect as per label on fitting.

Test button is on the side of the unit under the arrows, oposite side to the indicator LED.

Supply Voltage: 220-240VAC 50/60Hz Insulation Class: II

Ingress Protection: IP65

Battery Recharge Time: 24h

Max Battery Temperature: 60°C

Ambient Temperature: 0-45°C

Charge indicator: Dual colour LED

Deep Discharge Protection DDP Assembly indoors to flat surface Non-maintained Operation

The lamp holder shall not be replaced

### Important

It is recommended that the unit is installed by a competent person ensuring the installation complies with the necessary standards.

The company accept no responsibility for incorrect installation, operation or

After installation of the fitting, the battery must be charged for 16/24 hours.

The battery should be changed when the battery be failed on charging's ability.

The LED's module from the light is non-replaceable.

Building insulation may abut the sides of the luminaire.

### Indicator LED System status is locally by a bi-color indicator LED. Mains Operation Permanent Green Standby ,System OK Fault status: If an error is detected, the indicator L Fast flashing Green (0.25s on 0.25s off) Function test underway Function test underway switches to RED. If the error has been corrected please re-connecting the ba Slow flashing Green Duration test underway Duration test underway after the mains power off, the indicate immediately switches back to GREEN Open Circuit or Short circuit or LED failure mains power on Fast flashing Red (0.25s on 0.25s off) Battery capacity failure Battery failed duration test Slow flashing Red (1s on 1s off) Incorrect battery voltage or Battery failed duration test: Battery fault After an exchange of the battery and Emergency mode: Mains down the button (>10S) reset the time Green and Red off **Battery Operation** indicator LED switches to GREEN. LED flashing and indicator light (green light) flashing at the same time at the same time.

This product has self test and standard test function.

Press the test button for function test, the green LED will flash for 5 seconds. To activate the programme, long press the test button for 10 seconds.

Long press for 5 seconds to activate mode. Red flash (4 Hz) is for standard function, and green flash (4Hz) for self test function.

**British Electric Lamps Ltd** 

Unit A Foxbridge Way, Normanton Industrial Estate Normanton, West Yorkshire, WF6 1TN

T: +44 (0)1924 893380 F: +44 (0)1924 894320 E: sales@belllighting.co.uk

www.belllighting.co.uk