

Date	Revision
16.06.26	2

Spectrum Endure Anti Ligature Exit Sign (09158)

Important Information

We recommend that luminaires are installed by a qualified electrician ensuring the installation complies with current IEE wiring regulations & local building control.

- On emergency fittings, all tests should be carried out in accordance with current emergency lighting regulations.
- BELL Lighting will not accept responsibility for any claims arising from poor installation.
- The operating temperature should be between 0°C and 35°C for emergency fittings.
- Do not cover with insulation. Ensure that there is adequate free air ventilation around the fitting.
- Always switch off mains supply before installing.
- Mount to a stable, secure surface that is rated for the weight of the luminaire.
- Classification label to be amended to show operating mode at the time of installation.
- Upgrading of MCB may be necessary.
- Not suitable for ATEX hazardous zones (explosive atmospheres).
- Not intended for use by children.
- Indoor use only, not suitable for outdoor use.
- Only use battery as supplied.
- Ensure the battery is fully inserted before use.
- Route the battery cables under the LED array to avoid cable shadows.
- Allow the battery to fully charge for 24 hours before performing the initial discharge test.
- If the lighting fails within 3 hours of an emergency discharge test, the battery is to be replaced. Contact your local distributor for a suitable replacement.
- The light source of this luminaire is not replaceable, when the light source reaches end of life, the whole luminaire must be replaced.

This product may contain substances that can be hazardous to the environment if not disposed of properly. Electrical and electronic equipment should never be disposed of with general household waste but must be separated for its correct treatment and recovery. Where possible recycle your packaging.




Read these instructions before installation and retain for future reference
This equipment should be installed by a competent electrician




Installation:

- Connect mains supply wiring as follows L(Live) N(Neutral)

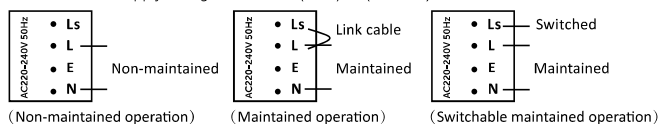

- When all connections have been made reassemble the fitting completely.
- Switch on 220-240V AC supply and check that the green L.e.d indicator illuminates to confirm charging of batteries.
- Allow a short period for part charging for the batteries and then isolate the mains supply to the fitting in order to check the correct operation of the fitting in emergency mode. When the first use, after a continuous charge for 36 hours, a mains failure should be simulated to ensure that the fitting works for its specified time(only at a safe & appropriate time). The fitting will be fully charged with in 24 hours.

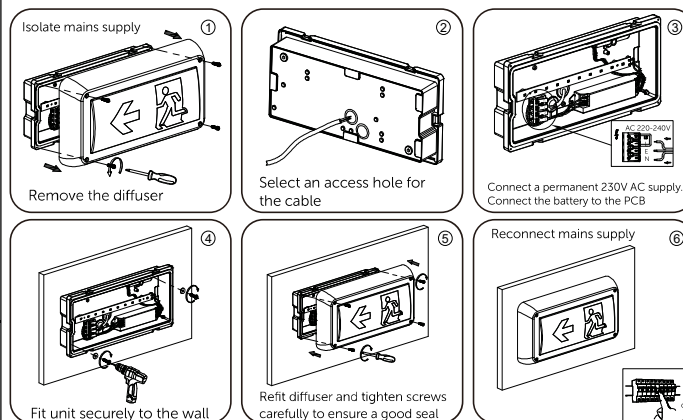

RECOMMENDED ROUTINE TEST PROCEDURE

The following test are designed to ensure the continued protection of your premises and occupants. Because of the possibility of a failure of the normal lighting supply occurring shortly after a period of testing, all tests should, whenever possible, be undertaken at times of least risk, e.g. during daylight hours.

ONCE A DAY

Visual inspection of battery charge led.

ONCE A MONTH

Each unit should be energised from its battery for adequate time to ensure, by simulation of a failure of the normal lighting supply, the emergency mode is functioning correctly.

ONCE EACH YEAR

All units should be placed into emergency mode and checked that the duration provided by the battery meets the specified time period.

Conducting additional manual tests of self-test fittings may significantly reduce battery life

Specification

- Input Voltage: AC220-240V 50/60Hz
- Wattage: 3W.
- Surfacing brightness: ≥ 200 cd/m².
- Battery: LiFePO₄ 3.2V 1800mAh
- Led built-in
- Maximum Ambient Temperature : 35°C
- Re-charging time: 24 hours.
- Emergency duration: more than 3 hours.
- IK rating: IK10
- IP rating: IP65



British Electric Lamps Ltd
 BELL House, Foxbridge Way, Normanton Industrial Estate
 Normanton, West Yorkshire. WF6 1TN

BELL Ireland
 Marina House, Clarence Street, Dun Laoghaire
 County Dublin, Ireland, A96 AX76

T: +44 (0)1924 893380 F: +44 (0)1924 894320
 E: sales@belllighting.co.uk

www.belllighting.co.uk

Technical Helpline +44 (0)1924 893380

Technical@belllighting.co.uk



Spectrum Endure Anti Ligature Exit Sign (09158)

Date	Revision
16.06.26	2

Self-Test

Self-Test fittings perform a self-commissioning test at first power on. After charging for 24 hours a full duration test (3 hours) is performed. Initial function and duration tests are randomly generated. They are then performed in accordance with standard requirements (every 30 days for function tests and every 52 weeks for duration tests).

A single bi-colour indicator LED is fitted in all Self-Test products. This LED is clearly visible for manual inspection. It indicates the module status. The LED shows permanent green or flashing green when conditions are normal and flashing red if a fault condition is present

Function test

A function test is a 2 minute test that simulates a mains failure and checks the operation of the emergency light source from the battery supply.

The local indicator LED slow flashes green whilst the 2 minute function test is in progress.

If there is a failure during a function test the local indicator LED changes to a flashing red.

Duration test

 
A duration test simulates a mains failure. It also checks the operation of the emergency light source from the battery supply for the rated duration of the module.

The local indicator LED fast flashes green whilst the duration test is in progress.

If there is a failure during a duration test the local indicator LED changes to flashing red. The battery is required to be fully charged before a duration test can be started.

SELF-TEST ENABLE / DISABLE SELECTOR SWITCH

- The Selector Switch is located inside the product on the convertor unit.
- This product is factory pre-set to operate in **MANUAL-TEST** mode. Selector Switch is set to position **ON**.
- For SELF-TEST operation mode, the selector switch must be set to position **1** before installation.



Please refer to following chart below for more complete description/fault indication:

Test Button	Green LED	Status
Green solid	Mains on / No fault	
Green flash	Slow flash	Function for 2 minutes
	Fast flash	3 hour duration test
Red flash	1 Flash cycle	Battery fault
	2 Flash cycle	Lamp fault
	3 Flash cycle	Duration test fault

Conducting additional manual tests of self-test fittings may significantly reduce battery life

British Electric Lamps Ltd
BELL House, Foxbridge Way, Normanton Industrial Estate
Normanton, West Yorkshire. WF6 1TN

BELL Ireland
Marina House, Clarence Street, Dun Laoghaire
County Dublin, Ireland, A96 AX76

T: +44 (0)1924 893380 F: +44 (0)1924 894320
E: sales@belllighting.co.uk

www.belllighting.co.uk

Technical Helpline +44 (0)1924 893380

Technical@belllighting.co.uk



Testing & Commissioning for Emergency Luminaire

- Ensure the Load is connected.
- Connect the battery.
- Switch on the Unswitched Supply - Check the Charge LED illuminates.
- Switch on the Maintained Supply - Check the LED illuminates as normal.
- Switch off the Maintained Supply.
- Switch off the Unswitched Supply - Check the Charge LED extinguishes and the load LED illuminates at a reduced output.
- Enter the commissioning date on the Battery Pack. Switch on the Unswitched Supply

Luminaire Ref/Location		In Case of difficulty, contact the Installation Engineers:- Tel: _____									
Full Recharge Time 24 Hours		Duration 3 Hours					Lamp Type - LED				
ROUTINE TEST RECORD											
		Year 1		Year 2		Year 3		Year 4		Year 5	
Monthly Test	Signed	Date	Signed	Date	Signed	Date	Signed	Date	Signed	Date	
Functional											
Functional											
Functional											
Functional											
Functional											
Functional											
Functional											
Functional											
Functional											
Functional											
Functional											
Functional											
Three Hour											