

Read these instructions before installation and retain for future reference. This equipment should be installed by a competent electrician 

Important Information

We recommend that luminaires are installed by a qualified electrician ensuring the installation complies with current IEE wiring regulations BS7671:2018 & local building control.

- Operating Temperature 0°C to +35°C
- BELL will not accept responsibility for any claims arising from a poor installation.
- The light source of this luminaire is not replaceable: when the light source reaches end of life, the whole luminaire must be replaced.


Warning: Before installation ensure power is disconnected.



This product may contain substances that can be hazardous to the environment if not disposed of properly. Electrical and electronic equipment should never be disposed of with general household waste but must be separated for its correct treatment and recovery.

Where possible recycle your packaging.



Installation

1. Switch off the power supply before installation
2. Connect the lead wire correctly 
3. Fix the stainless buttons with screws or hang them
4. Fix the batten in the brackets.

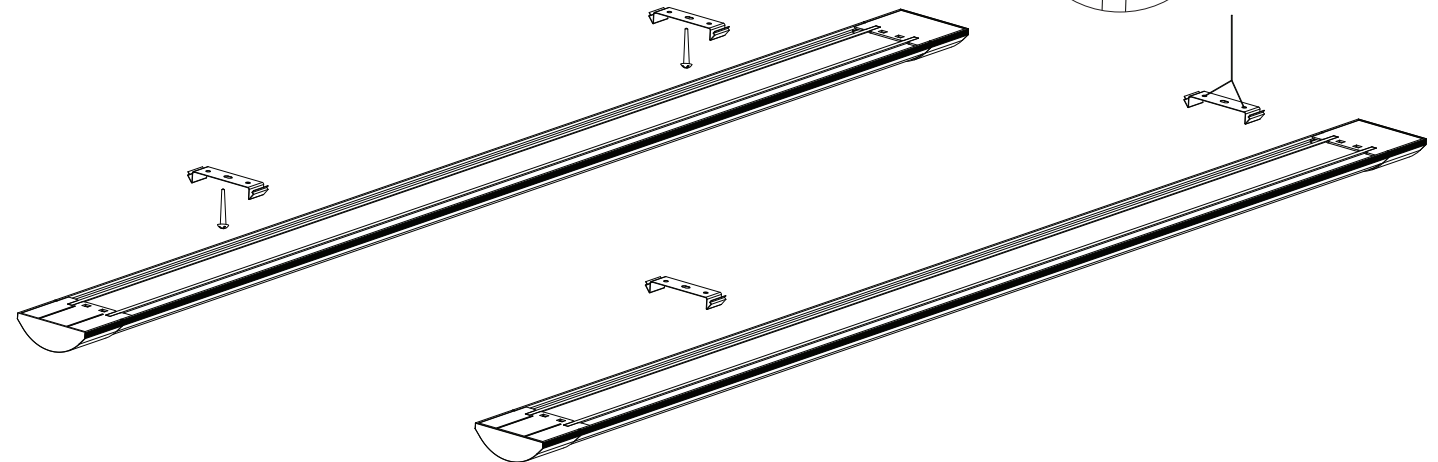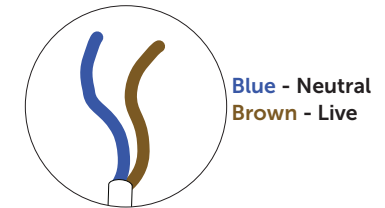

Length	Watts (W)	Volts (V)	Frequency (Hz)	Colour Temp (K)	Lumens (lm)	Life Hours (h)	IP Rating	Energy Rating	CRI (ra)	L (mm)	W (mm)	H (mm)
4FT	38	220-240	50HZ/60HZ	4000	4400	35000	20	A+	>80	1230	75	26
5FT	45	220-240	50HZ/60HZ	4000	5300	35000	20	A+	>80	1530	75	26
6FT	56	220-240	50HZ/60HZ	4000	6500	35000	20	A+	>80	1830	75	26

Technical Helpline +44 (0)1924 893380

www.bellighting.co.uk

British Electric Lamps Ltd. Unit A Foxbridge Way, Normanton Industrial Estate, Normanton, West Yorkshire. WF6 1TN

T: +44 (0)1924 893380 F: +44 (0)1924 894320 E: sales@bellighting.co.uk

www.bellighting.co.uk