

Installation Instructions: Skyline Slim Floodlight (10980-10992 & 10977-10979)

Read these instructions before installation and retain for future reference This equipment should be installed by a competent electrician





Important Information

We recommend that luminaires are installed by a qualified electrician ensuring the installation complies with current IEE wiring regulations BS7671:2018 & local building control.

- BELL will not accept responsibility for any claims arising from a poor installation.
- The light source of this luminaire is not replaceable: when the light source reaches end of life, the whole luminaire must be replaced.
- Always switch off mains supply before installing.
- Operating Temperature -30°C to +35°C
- External use only

This product may contain substances that can be hazardous to the environment if not disposed of properly. Electrical and electronic equipment should never be disposed of with general household waste but must be separated for its correct treatment and recovery. Where possible recycle your packaging.

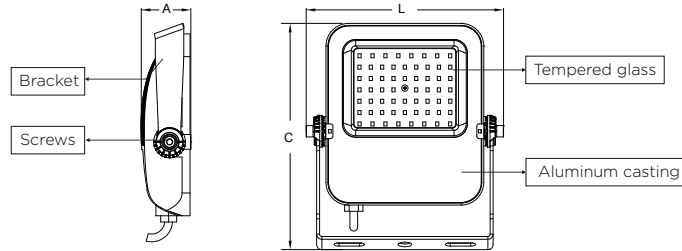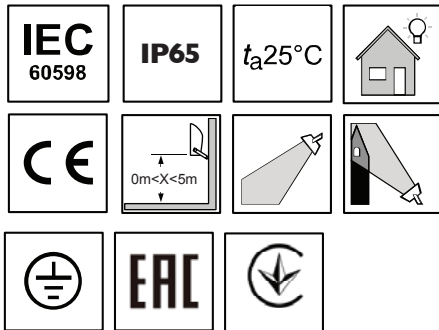

Specification:

	10W	20W	30W	50W	100W	200W
POWER	10W	20W	30W	50W	100W	200W
LUMENS	1200lm	2400lm	3600lm	6000lm	12000lm	24000lm
DIMENSION (LxWxA)	110x132x31 mm	117x143x33 mm	134x158x34 mm	174x199x44 mm	272x315x60 mm	347x408x60 mm
COLOR TEMPERATURE	3000k / 5000K					
LIFETIME	50,000 hours					
BEAM ANGLE	110°					

PIR Version

Automatic operation:

- The light will turn on when walking through detection range (see below)
- The light will turn off after 60s when there is no movement detected

Manual Over-ride

- Turn the unit on for 5 seconds and switch off twice in 2 seconds. The unit will stay on, bypassing the sensor.
- Turn off the unit for 10 seconds, the unit will be back to automatic operation mode.

