

Date Revision 8.4.2024 1

Read these instructions before installation and retain for future reference This equipment should be installed by a competent electrician



## Important Information

We recommend that luminaires are installed by a qualified electrician ensuring the installation complies with current IEE wiring regulations BS7671:2018 & local building control.


- All tests should be carried out in accordance to EN 50172:2004.
- BELL will not accept responsibility for any claims arising from poor installation.
- The light source of this luminaire is not replaceable, when the light source reaches end of life, the whole luminaire must be replaced.

### **Important User Advice**

- · The ambient room temperature should not exceed 35°C.
- Ensure that there is adequate free air ventilation around the fitting.
- · Always switch off mains supply before installing.

This product may contain substances that can be hazardous to the environment if not disposed of properly. Electrical and electronic equipment should never be disposed of with general household waste but must be separated for its correct treatment and recovery. Where possible recycle your packaging.



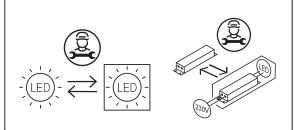

| 1.  | 2.  | 3.                                 | 4.  |
|---|---|------------------------------------|---|
| 5.  | 6.  | 7.                                 | 8.  |
| Wiring Diagrams Standard / with Dimming Sensor: | Emergency / Emergency c/w Dimming Senor:    | Microwave Sensor:                  | Emergency c/w Microwave Sensor:                       |
| N Neutral  B Earth  L Live                      | N Neutral  B Earth  L Live  K Switched Live | N Neutral  Earth  L Live  SL Slave | N Neutral  B Earth  L Live  K Switched Live  SL Slave |

**British Electric Lamps Ltd** 

BELL House, Foxbridge Way, Normanton Industrial Estate Normanton, West Yorkshire. WF6 1TN

www.belllighting.co.uk



 Date
 Revision


 8.4.2024
 1

Microwave Function

Read these instructions before installation and retain for future reference This equipment should be installed by a competent electrician



**6. Structure** Microwave Function

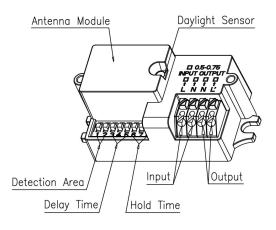

## 7. DIP Switch Setting

1) Detection Area

|     | 1  | 2  |      |
|-----|----|----|------|
| I   | ON | ON | 100% |
| II  | ON | -  | 75%  |
| III | -  | ON | 50%  |
| IV  | -  | -  | 25%  |

2) Hold Time

|      | 3  | 4  | 5  |       |
|------|----|----|----|-------|
| I    | ON | ON | ON | 5S    |
| II   | ON | ON | -  | 30S   |
| III  | ON | -  | ON | 1min  |
| IV   | ON | -  | -  | 3min  |
| V    | -  | ON | ON | 5min  |
| VI   | -  | ON | -  | 10min |
| VII  | -  | -  | ON | 20min |
| VIII | -  | -  | -  | 30min |

3) Sensor

|     | 7  | 8  | 9  |          |
|-----|----|----|----|----------|
| I   | ON | ON | ON | 2Lux     |
| II  | ON | ON | -  | 10Lux    |
| III | -  | ON | -  | 25Lux    |
| IV  | ON | -  | -  | 50Lux    |
| V   | -  | -  | -  | Disable* |

 $\hbox{``Setting ``Disable''}, sensor turns \ light \ when \ detecting \ moving \ object \ whether \ the \ daylight \ brightness \ is \ enough \ or \ not.$ 

British Electric Lamps Ltd

BELL House, Foxbridge Way, Normanton Industrial Estate
Normanton, West Yorkshire. WF6 1TN


<sup>\*</sup>Daylight thresholds are typical values that are measured on a sunny day without shadow and in an ambient light diffuse reflection status.



Date Revision 8.4.2024 1

Read these instructions before installation and retain for future reference This equipment should be installed by a competent electrician



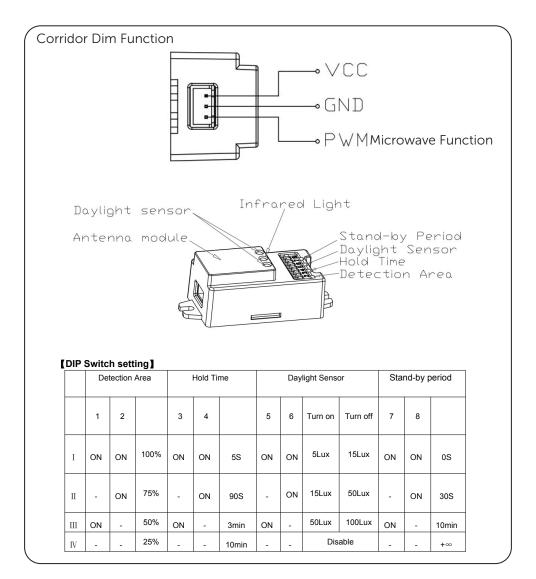

#### **British Electric Lamps Ltd**

BELL House, Foxbridge Way, Normanton Industrial Estate Normanton, West Yorkshire. WF6 1TN


Technical Helpline +44 (0)1924 893380




Date Revision 8.4.2024 1

Read these instructions before installation and retain for future reference This equipment should be installed by a competent electrician



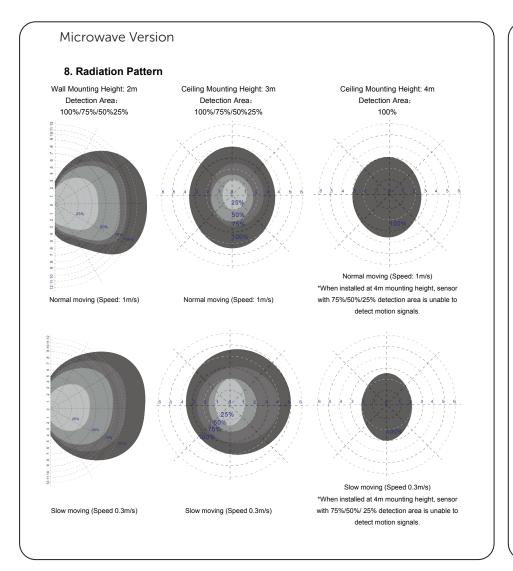

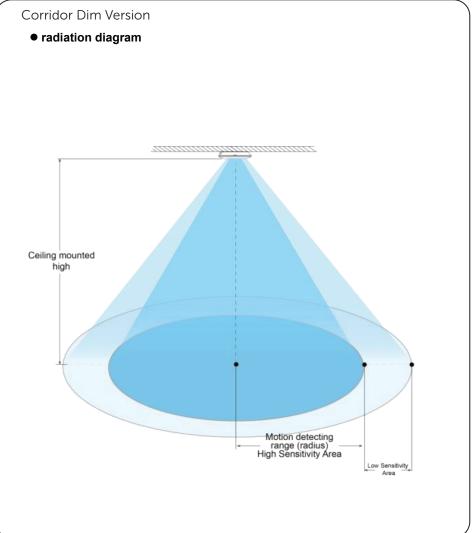

**British Electric Lamps Ltd** 

BELL House, Foxbridge Way, Normanton Industrial Estate Normanton, West Yorkshire. WF6 1TN