

Date	Revision
24.5.2022	2




Installation Instructions: High Bay (08885/9)

Read these instructions before installation and retain for future reference. This equipment should be installed by a competent electrician. We recommend that luminaires are installed by a qualified electrician ensuring the installation complies with current IEE wiring regulations BS7671:2018 & local building control.





- All tests to be carried out in accordance to EN50172: 2004
- BELL will not accept responsibility for any claims arising from a poor installation.
- The light source of this luminaire is not replaceable: when the light source reaches end of life, the whole luminaire must be replaced.
- Always switch off mains supply before installing.
- You are advised to test 5 samples before mass application of sensor in a new lighting project. The distance between any inductive sensors should be greater than 3m.
- Operating Temperature -30°C to +35°C, emergency versions 0°C to +35°C

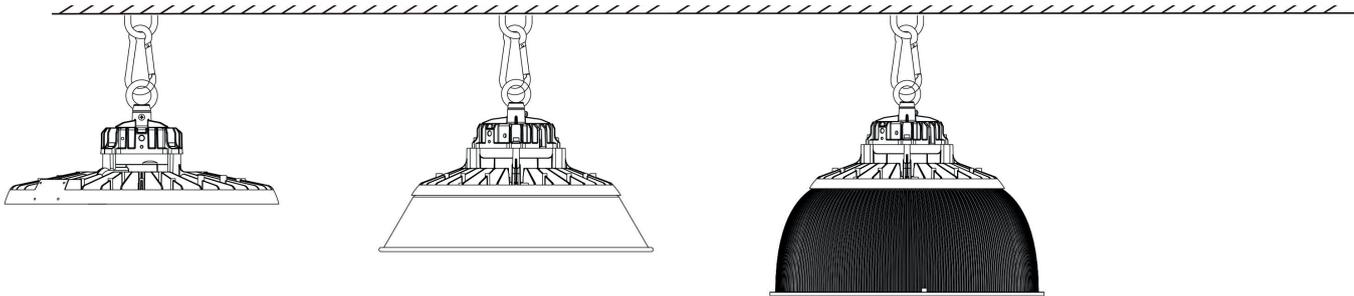

Adjustable power

Caution:
Pls power off the luminaire before adjusting the DIP switch.
Pls do not use metal tool to adjust the DIP switch.
Pls adjust the switch gently.

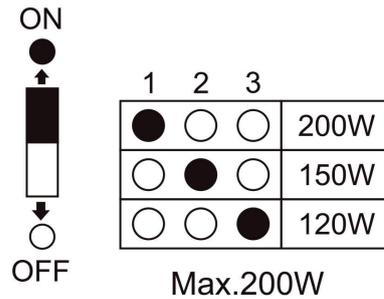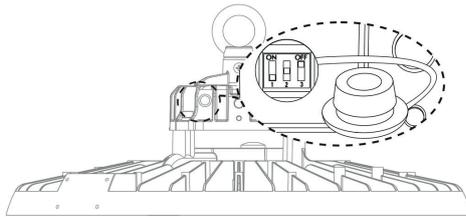

Motion sensor



L	brown	black
N	blue	white
⊕ GND	yellow/green	green

•if the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

Technical Helpline +44 (0)1924 893380

www.bellighting.co.uk

British Electric Lamps Ltd, Unit A Foxbridge Way
Normanton Ind Est, Normanton, West Yorkshire. WF6 1TN

T: +44 (0)1924 893380 F: +44 (0)1924 894320 E: sales@bellighting.co.uk