

 
AIRMASTER

HEATING & VENTILATION

MINI OIL FILLED RADIATOR 500W

5 FINS - COLUMN STYLE WITH THERMOSTAT, 500W, 220/240V ac/50Hz

INSTRUCTION MANUAL

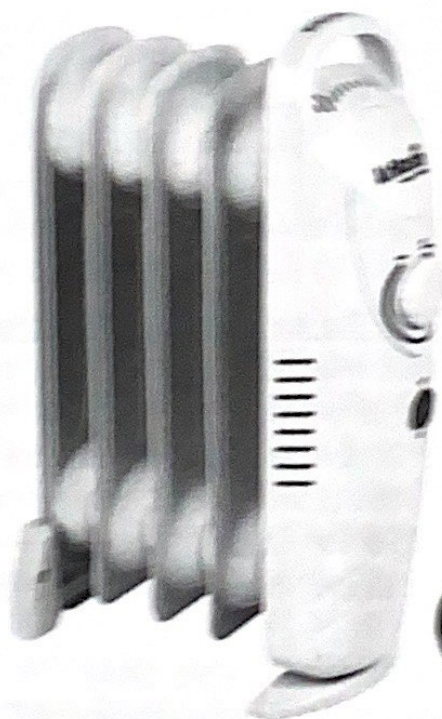

PRODUCT CODE: CRMINI

**WARNING: READ THIS OWNER'S MANUAL CAREFULLY BEFORE USE.
THIS PRODUCT IS ONLY SUITABLE FOR WELL INSULATED SPACE AND OCCASIONAL USE.**

IMPORTANT Read these instructions fully before using the heater. Retain these instructions for future reference.

NOTE:- THESE HEATERS ARE INTENDED FOR DOMESTIC USE ONLY.

 
 
ASSEMBLY OF THE HEATER.

Included Parts.

1. Power Switch 2. Thermostat Knob 3. Handle 4. Oil Filled Fins 5. Separate Foot.

Fitting the foot to the Heater(Refer to the right fig.)

Fit the separate foot to the radiator by pushing it firmly onto the control panel and end fin as shown in the diagram. Check the stability of the heater by standing it on a smooth level surface.

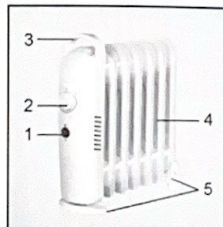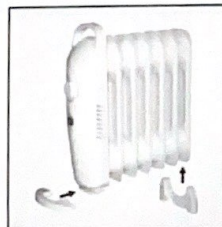

SAFETY INSTRUCTIONS (to be read before operating the heater)

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. The product is for household use only.
4. Connect the appliance to single phase AC supply of the voltage specified on the rating plate.
5. In order to avoid overheating, do not cover the heater.
6. Never leave the heater unattended while it is in use. Always turn the product to the OFF position and unplug it from the electrical outlet when not in use.
7. Extreme caution is necessary when any heater is used by or near children, reduced physical, sensory or mental capabilities or elderly person and whenever the heater is left operating and unattended.

8. The heater must not be located immediately below an electrical socket-outlet.

9. Do not run cord under carpeting and do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic area and where it will not be tripped over.

10. Do not operate the heater with a damaged cord or plug, or after the heater malfunctions, has been dropped, or damaged in any manner.

11. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person to avoid a hazard.

12. Avoid the use of an extension cord as this may overheat and cause a risk of fire.

13. Use the heater in a well-ventilated area. Do not insert or allow objects to enter any ventilation or exhaust opening. To prevent a possible fire, do not block air intakes or exhaust openings in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked. Use the heater on flat, dry surfaces only.

14. Do not place this heater near flammable materials, surfaces or substances, as there may be a risk of fire. Keep the above flammable materials, surfaces or substances at least 1m from the front of the product and keep them away from the sides and rear. 15. Do not use the heater in any areas where petrol, paint or other flammable liquids are stored e.g. Garages or workshops as a hot, arcing or sparking parts inside the heater.

16. Don't use this heater in the immediate surroundings of a bath, a shower or a swimming pool. Never locate the heater where it may fall into bathtub or other water container.

17. This heater is hot when in use. To avoid burns and personal injury, do not let bare skin touch hot surfaces. If provided, use handles when moving the product.

18. Be sure that no other appliances are in use on the same electrical circuit as your product as an overload can occur.

19. This heater is filled with a precise quantity of special oil.

20. Repair requiring opening of the oil container are only to be made by the manufacturer or its service agent who should be contacted if there is an oil leakage.

21. Regulations concerning the disposal of oil when scrapping the appliance have to be followed.
22. The heater should not be used in a room, of which the floor area is less than 5 M2.
23. The cord shouldn't be placed nearby the hot surface of the appliance.
24. NOTE: It is normal when the heaters are turned on for the first time or when they are turned on after having not been used for a long period of time the heaters may have noise inside. This will disappear when the heater has been on a short while.

OPERATION OF THE HEATER

NOTE 1:- When the heater is turned on for the first time or after having not been used for a long period, it may emit some smell and fumes. These will disappear when the heater has been on a short while.

- 1) Choose a suitable location for the heater, taking into account the safety instructions above.
- 2) Insert the plug of the heater into a suitable socket.
- 3) Turn the thermostat knob fully in a clockwise direction to the maximum setting.
- 4) Turn on the heating element by means of the rocker switch on the side panel. When the heating element is on the power switch will illuminate.
- 5) When the desired room temperature has been reached, the thermostat knob should be turned slowly anti-clockwise until the thermostat is heard to click off and the light on the power switch is seen to go out. After this the heater will keep the air temperature in the room at the set temperature by switching on and off automatically.

CLEANING THE HEATER

- 1) Always un-plug the heater from the wall socket and allow it to cool down before cleaning.
- 2) Clean the outside of the heater by wiping with a damp cloth and buff with a dry cloth. Do not use any detergents or abrasives and do not allow any water to enter the heater.

MAINTENANCE

1. Always remove the plug from the socket-outlet and allow the radiator to cool down before clean the heater.

2. Wipe radiator with a soft damp (not wet) cloth.

WARNING:

Do not immerse the heater in water.
Do not use any cleaning chemicals such as detergents and abrasives.
Do not allow the interior to get wet as this could create a hazard.

3. To store away the heater, wind the cable round bobbin and store the heater in a clean dry place.
4. In case of malfunction or doubt, do not try to repair the radiator yourself, it may result in a fire hazard or electric shock.

CONFORMITY WITH DIRECTIVES

This product is CE marked to denote conformity with Directives 2006/95/EC (Low Voltage) and the EMC directive (2004/108/EC), as amended.

CORRECT DISPOSAL OF THIS PRODUCT



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

CECED ELECTRICAL GROUP

44-48 Freshwater Road Dagenham, Essex. RM8 1RX
E: info@cedelectrical.co.uk | W: www.cedelectrical.co.uk
T: 020 8503 8500 | F: 020 8503 8900

Information requirements for electric local space heaters

Model identifier(s): CRMINI

Item	Symbol	Value	Unit	Item	Unit
Heat output				Type of heat input, for electric storage local space heaters only (select one)	
Nominal heat output	Q _{nom}	0.2703	kW	manual heat charge control, with integrated thermostat	NA
Minimum heat output (indicative)	Q _{min}	0	kW	manual heat charge control with room and/or outdoor temperature feedback	NA
Maximum continuous heat output	Q _{max,c}	0.2703	kW	electronic heat charge control with room and/or outdoor temperature feedback	NA
Auxiliary electricity consumption				fan assisted heat output	
At nominal heat output	P _{nom}	N/A	kW	Type of heat output/room temperature control (select one)	
At minimum heat output	P _{min}	N/A	kW	single stage heat output and no room temperature control	[no]
In standby mode	S ₀	N/A	kW	Two or more manual stages, no room temperature control	[no]
				with mechanic thermostat room temperature control	[yes]
				with electronic room temperature control	[no]
				electronic room temperature control plus day timer	[no]
				electronic room temperature control plus week timer	[no]
				Other control options (multiple selections possible)	
				room temperature control, with presence detection	[no]
				room temperature control, with open window detection	[no]
				with distance control option	[no]
				with adaptive start control	[no]
				with working time limitation	[no]
				with black bulb sensor	[no]
Contact details	Refer to Applicant Name / Address				