


1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. Caution: Do not cover anything on your heater when in use.
4. The fan-heater must not be placed near a socket and the following hint: This fan-heater must not be used near a bath, shower or swimming-pool
5. This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

**AirMaster**  
Heating & Ventilation

## FAN HEATERS

### USER INSTRUCTIONS

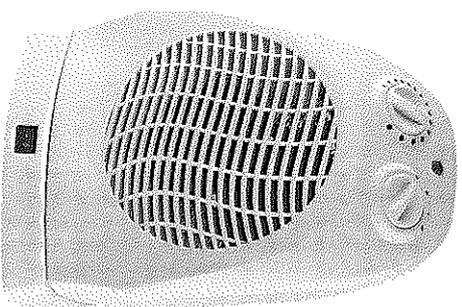

**FH20A**

**220-240V ~ 50Hz 1800-2000W**

# USER INSTRUCTIONS

## IMPORTANT SAFEGUARDS

### PLEASE READ CAREFULLY – ALWAYS MAINTAIN SAFETY WHEN WORKING WITH ANY APPLIANCE

- Check that the mains voltage corresponds with the rating of the appliances in water or any other liquid.
- Do not touch hot surfaces – Use handles or knobs
- To protect against electric shock, do not immerse cords, plugs or appliances in water or any other liquid.
- Do not leave any appliance unattended while it is operation.
- Close supervision is necessary when any appliance is used by or near children or infirm person.
- Unplug from outlet when not in use or before cleaning. Allow to cool before putting on or taking off any parts.
- Do not operate the appliance with a damaged cord or plug. Or after the appliance has been damaged in any manner. If the supply cord or appliance is damaged, it must be replaced by the manufacturer or it's service agent or a similarly qualified person in order to avoid a hazard.
- The use of accessory attachments not recommended
- The use of accessory attachment not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- To disconnect-remove the plug from the outlet. Do not pull plug out by the cord.
- No liability can be accepted for any damage caused by noncompliance with these instructions or any other improper use or mishandling.
- Never use the appliance near a bath, shower or a swimming pool.
- Never place flammable objects or clothing on top of the heater.
- Allow a 50cm safe area around the heater on the top and sides and a 120cm safe area at the front.
- Never use a heater in a room with explosive gas such as petrol. Or while using any kinds of flammable glues, sprays or solvents.
- Prevent overheating of the appliance by keeping the air inlets and outlets clean and free of anything that may cause blockage. Check all inlets and outlets from time to time for accumulated dust. **DO NOT COVER.**
- If overheating should occur, the built-in overheating safety device will shut the appliance off.
- Do not insert any foreign objects into the grill.
- Keep the rear grill clear of any draped fabric or curtains.

## OPERATION OF YOUR HEATER

- Remove the heater from all packaging and place it in desired location.
- Ensure that there is a safe area between the heater and furniture, curtains, etc-50cm safe area from top and sides and 120cm safe area in front.
- Unwind the Power Cord and plug it into the Power Outlet.
- To activate the heater, turn the knob clock-wise to the "0" position for cool air. turn knob to "I" for low power, "II" for maximum power.
- AUTO SATEY SHUT OFF**  
The heater has a built-in safety device, which will switch the heater OFF in case of accidental overheating. To reset the heater, follow the next steps:
- Turn the control setting to the '0' position.
- Unplug the heater and wait 5-10minutes for the unit to cool down.
- After the unit has cooled, plug it in and operate normally.
- Turn selector switch into desired position(Fan, Low or High).
- Turn the thermostat switch to the desired temperature position.
- When you feel the room temperature comfortable, turn the thermostat switch anti-clockwise slowly to the minimal direction until the appliance switches off.
- The thermostat switch will keep the room temperature at the desired temperature automatically.
- You can also turn the thermostat switch anti-clockwise to the minimum position or turn the thermostat switch clockwise to the maximum position to make the temperature lower or higher.

### **Note: NEVER COVER THE HEATER**

## CLEANING AND MAINTENANCE

### **DO NOT IMMERSE IN WATER OR ANY LIQUID**

- Be sure to switch off the power supply and pull out the plug out the plug before cleaning.
- Wait for the heater to cool down sufficiently.
- Clean the body of the heater with a damp cloth. **DO NOT ALLOW** water into the appliance.
- **DO NOT** use soap or chemicals which may damage the housing of the heater.
- Allow sufficient drying time before operating again.
- Clean the air inlets and outlets regularly with a vacuum cleaner(with regular use, at least twice a year)
- When the unit is not in use, we recommend that the heater is re-packed in its original packaging and stored in a cool, dry place.