

AIRMASTER
HEATING & VENTILATION

CONVECTOR HEATER
USER INSTRUCTIONS



Product Code: HC2D (TS:13061)
220-240V~50-60Hz 2000W

This product is only suitable for well insulated spaces or occasional use

BY  **CED ELECTRICAL GROUP**

44-48 Freshwater Road, Dagenham, Essex RM8 1RX (England)

Please carefully read the below instruction before using

1. Do not use the heater unless the feet are correctly attached.
2. Ensure the power supply to the socket into which the heater is plugged is in accordance with the rating label on the heater and that the socket is earthed.
3. Keep the power cord away from the hot body of the heater.
4. Warning: Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
5. **WARNING:** in order to avoid overheating do not cover the heater.
6. The meaning of figure  in marking is 'DO NOT COVER' indoor use only.
7. Indoor use only.
8. Do not place the heater on carpets having a very deep pile.
9. Always ensure that the heater is placed on a firm level surface.
10. Do not place the heater close to curtains or furniture in order to avoid a fire hazard.
11. Warning: heater is not located immediately below a socket-outlet.
12. Warning: Heater can't be mounted on the wall.
13. Do not insert any object through the heat outlet or air grilles of the heater.
14. Do not use the heater in areas where flammable liquids are stored or where flammable fumes may be present.
15. Always unplug the heater when moving it from one location to another.
16. If the supply cord is damaged, it must be replaced by the manufacturer. Its service agent or similarly qualified persons in order to avoid a hazard.
17. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the

appliance in a safe way and understand the hazards involved.


18. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

19. Children of less than 3 years should be kept away unless continuously supervised.


20. Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

21. **CAUTION** — Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

Before using the heater, the feet (supplied separately in the carton), must be fitted to the unit. These are to be attached to the base of the heater using the 4 self-tapping screws provided, taking care to ensure that they are located correctly in the bottom ends of the heater side moldings

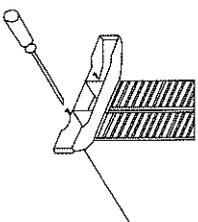

NOTE: It is normal when the heaters are turned on for the first time or when they are turned on after having not been used for a long period of time the heaters may emit some smell and fumes. This will disappear when the heater has been on a short while.

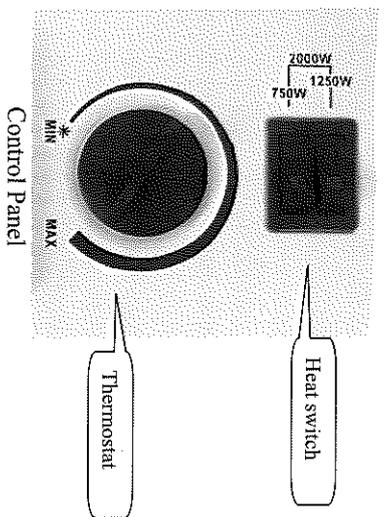

Choose a suitable location for the heater, taking into account the safety instructions above.

Insert the plug of the heater into a suitable socket.

Turn the thermostat knob fully in a clockwise direction to the maximum setting.

Turn on the heating elements by means of the rocker switches on the side panel. When the heating elements are on the switches will illuminate. For maximum heat output both switches should be on.

When the desired room temperature has been reached, the thermostat knob should be turned slowly anti-clockwise until the thermostat is heard to click off and the lights on the element switches are seen to go out. After this the heater will keep the air temperature in the room at the set temperature by switching on and off automatically.

PROTECTION AGAINST OVERHEATING

1) An additional fitted safety thermostat protects the heater against overheating and switches it off automatically. The service lamp then goes out. The heater is ready for service again after a short cooling-off phase (approx. 15 minutes).

2) If this repeat itself, first check whether the thermostat switch it set correctly or if objects hinder the heating operation.

Always un-plug the heater from the wall socket and allow it to cool down before cleaning.

Clean the outside of the heater by wiping with a damp cloth and buff with a dry cloth.

Do not use any detergents or abrasives and do not allow any water to enter the heater.

When the heater is not used for long periods of time it should be protected from dust and stored in a clean dry place.

 This marking indicates that this product should not be disposed with other household wastes throughout the EU.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Information requirements for electric local space heaters

Model identifier(s): DL01 STAND					
Item	Symbol	Value	Unit	Item	Unit
Heat output				Type of heat input, for electric storage local space heaters only (select one)	
Nominal heat output	P _{nom}	2,0	kW	manual heat charge control, with integrated thermostat	[no]
Minimum heat output (indicative)	P _{min}	0,75	kW	manual heat charge control with room and/or outdoor temperature feedback	[no]
Maximum continuous heat output	P _{max,c}	2,0	kW	electronic heat charge control with room and/or outdoor temperature feedback	[no]
Auxiliary electricity consumption				fan assisted heat output	
At nominal heat output	e _{max}	N.A.	kW	Type of heat output/room temperature control (select one)	
At minimum heat output	e _{min}	N.A.	kW	single stage heat output and no room temperature control	[no]
In standby mode	e _{stn}	0	kW	Two or more manual stages, no room temperature control	[no]
				with mechanic thermostat room temperature control	[yes]
				with electronic room temperature control	[no]
				electronic room temperature control plus day timer	[no]
				electronic room temperature control plus week timer	[no]
				Other control options (multiple selections possible)	
				room temperature control, with presence detection	[no]
				room temperature control, with open window detection	[no]
				with distance control option	[no]
				with adaptive start control	[no]
				with working time limitation	[no]
				with black bulb sensor	[no]
Contact details		CED Electrical Group, 44-48 Freshwater Road, Dagenham, Essex RM8 1RX (England).			

2

5

4

2