



INTERIOR
USE ONLY



FREE
STANDING



SPEED
SETTINGS



THERMAL
PROTECTION



INSTRUCTION/OPERATION MANUAL

Product Codes: PF16N



IMPORTANT SAFEGUARDS

Before using this product, ensure you read and follow these instructions carefully, even if you feel you are familiar with the product. The instructions contain important information concerning the use of this product, installation, safety and maintenance.

Please retain instructions for future use and reference.



CED
ELECTRICAL
GROUP

UK: 44 - 48 FRESHWATER ROAD, DAGENHAM, ESSEX, RM8 1RX
Te: 0208 503 8500 | W: www.cedelectrical.co.uk
EU: CED 46 Rosemount Business Park Dublin, D11 K26W, Ireland

CAUTION

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

 
 
1. Use this fan only as described in this manual. Other use not recommended may cause fire, electric shock or injury to persons.
2. This product is intended for household use ONLY and not for industrial or outdoor use.
3. To protect against electric shock, do not place fan in window, immerse unit, plug or cord in water or spray with liquids.
4. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT attempt to defeat this safety feature.
5. Close supervision is necessary when any appliance is used by or near children.
6. Press the OFF button and unplug the fan from the outlet when not in use, when moving the fan from one location to another and before cleaning.
7. To disconnect the fan, first press the OFF button, grip the plug and pull it from the wall outlet. Never pull by the cord.
8. Do not operate the fan in the presence of explosive and/or flammable fumes.
9. Do not place the fan or any parts near an open flame, cooking or other heating appliance.
10. If the supply cord is damaged, it must be replaced by the manufacturer, service agent or similarly qualified persons in order to avoid a hazard.
11. Avoid contact with moving fan parts.
12. The use of attachments not recommended by the manufacture may be hazardous.
13. Place the fan on a dry, level surface.
14. Do not hang or mount fan on a wall or ceiling.
15. Do not operate if the fan housing is removed or damaged.
16. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
17. Children shall not play with the appliance.
18. Cleaning and user maintenance shall not be made by children without supervision.

WARNING:

To Reduce The Risk of Fire or Electric Shock, Do Not Use This Fan With Any Solid-State Speed Control Device.

PART FIGURE




- 1.Grille Ring
- 2.Grille safety screw
- 3.Front Grille
- 4.Screw
- 5.Blade Nut
- 6.Fan Blade
- 7.Rear Grille nut
- 8.Rear Grille
- 9.Oscillating knob
- 10.Fan Body
- 11.Speed control button. 12.Body Stable Screw
- 13.Inner Pipe. 14.Pipe Nut
- 15.Outer Pipe. 16.Base Nut. 17.Cross Bars.

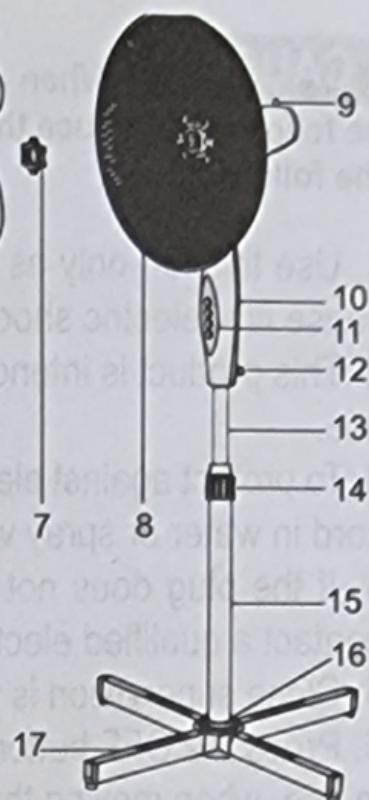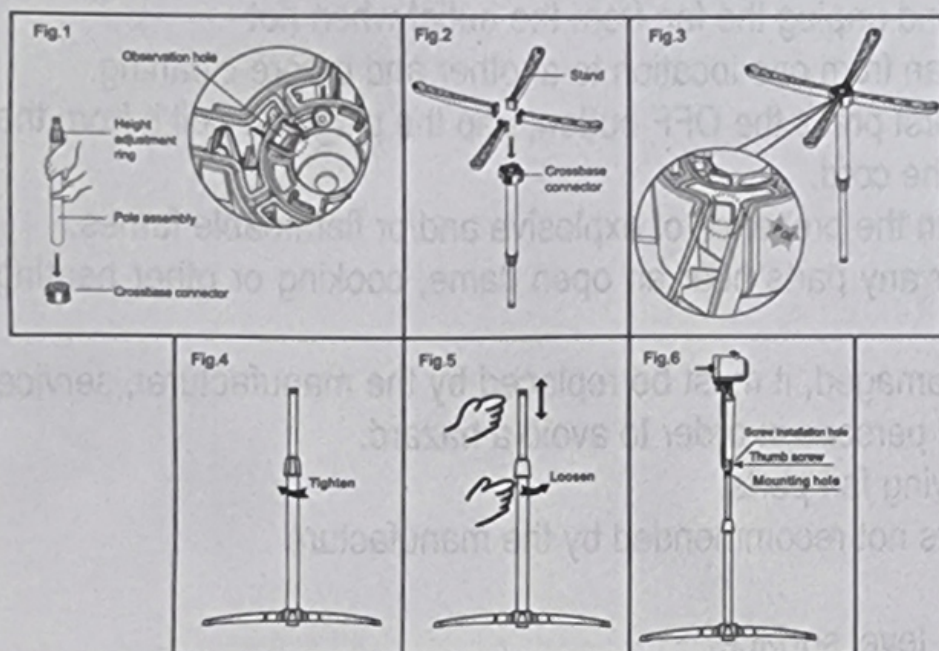

ASSEMBLY OF CROSS STAND & COLUMN UNIT

1. Insert the pole assembly into the connector from top to bottom, ensure it is installed in place(Through the through hole at the bottom of the connector, it can be judged whether the pole is installed in place) .(Fig.1)
2. Insert 4 stands into the crossbase connector. Ensure the stands are well fixed into the connector.(Fig.2,3)
3. From the extension pole loosen the height adjustment ring and adjust the internal pole to the desired height. (Note: If you can't find the internal pole, it slides inside the extension pole. You can pull it out from the extension pole.) Fasten the height adjustment ring.(Fig.4,5)
4. To attach the head unit to the internal pole, loosen the thumb screw on the bottom of the head unit. Place the head unit on the internal pole and tighten the thumb screw in alignment with the groove on the internal pole. (Fig.6)

   ASSEMBLY OF BLADE AND GRILLES

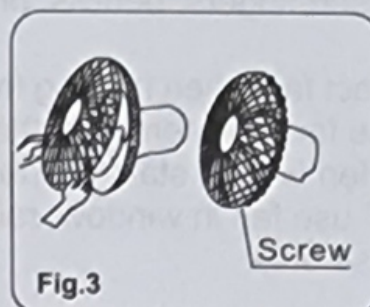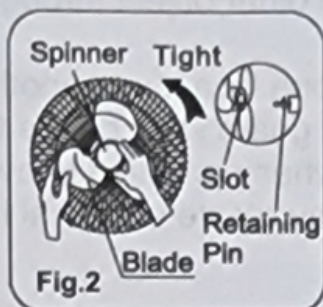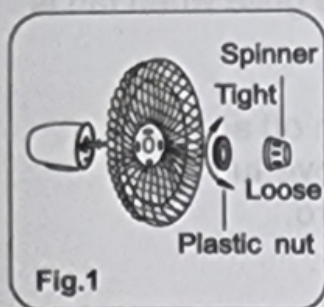

1. Remove the spinner on the head unit by turning it clockwise. Then remove the plastic nut by turning it counterclockwise.
2. Place the rear grille to the head unit so that the handle is upward
3. Screw on the plastic nut (clockwise) securing the fan grille on the head unit. (Step 1.2.3 see Fig.1).
4. Install the fan blade onto the motor shaft. Make sure the fan blade slot fits into the retaining pin of the motor shaft. (Step 4.5 see Fig.2)
5. Attach the spinner to the motor shaft by turning it counterclockwise to secure the fan blade.
6. Place the circlip around the rear grille (You can skip this step if the circlip is already attached to the rear grille.)
7. Secure both grilles firmly by tightening the fan grilles then close easy circlip. (Step 6.7 see Fig.3)

PLUG REPLACEMENT

 
This appliance is supplied with a BS1363 3 pin plug fitted with a 3Amp fuse. Should the fuse require replacement, it must be replaced with a fuse rated at 3Amp and approved to BS1362.

In the event the mains plug has to be removed/replaced for any reason, please note:

IMPORTANT: The wires in the mains lead are coloured in accordance with the following code:

Blue – Neutral

Brown – Live

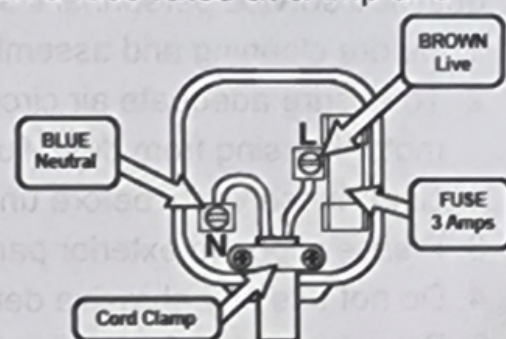

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows. The blue wire must be connected to the terminal marked with an N or coloured black. The brown wire must be connected to the terminal marked with an L or coloured red.

WARNING: Never connect live or neutral wires to the earth terminal of the plug.

NOTE: If a moulded plug is fitted and has to be removed take great care in disposing of the plug and severed cable, it must be destroyed to prevent engaging into a socket.

RULES FOR SAFE OPERATION

1. Never insert fingers, pencils, or any other object through the grille when fan is running.
2. Disconnect fan when moving from one location to another.
3. When the fan is assembled, the fan guard shall not be taken off anymore.
4. Be sure fan is on a stable surface when operating to avoid overturning.
5. DO NOT use fan in window, rain may create electrical hazard.
6. Indoor use only.

OPERATING INSTRUCTION

Speed control

Speed is controlled by the button switch. (-0 -1 -2 -3)

0-Off 1-Low 2-Medium 3-High

Oscillation control

To make the fan oscillate, push down on the oscillation knob located on the top of the motor housing. To stop the fan from oscillating in the position desired, push on the oscillating knob once more.

Tilt control

The airflow can be adjusted upward or downward by tilting the fan head to a vertical angle as desired.

MAINTENANCE INSTRUCTION

The fan requires little maintenance. Do not try to fix it by yourself. Refer it to qualified service personnel if service is needed.

1. Before cleaning and assembling, do not plug the pins into the socket.
2. To ensure adequate air circulation to the motor. Keep vents at the rear of the motor housing from dust, fluff and etc. A vacuum cleaner can not be used to clean these vents before unplug. Do not disassemble the fan remove fluff.
3. Please wipe the exterior parts with a soft cloth soaking a mild detergent.
4. Do not use any abrasive detergent or solvents to avoid scratching the surface.
5. Do not use any of the following as a cleaner: gasoline, thinner, bending.
6. Do not allow water or any other liquid into the motor housing or interior parts.

CLEANING

1. Be sure to unplug from the electrical supply source before cleaning.
2. Plastic parts should be cleaned with a soft cloth moisten with mild soap. Thoroughly remove soap film with dry cloth.

DISPOSAL

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

