

Caution


1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. **Caution:** Do not cover anything on your heater when in use.
4. The fan-heater must not be placed near a socket and the following hint: This fan-heater must not be used near a bath, shower or swimming-pool
5. This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

WARNINGS

- ◇ Do not use the heater in reach of a shower, bath or a swimming pool.
 - ◇ Heater is not located immediately below a socket-outlet
 - ◇ If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
 - ◇ In order to avoid overheating, do not cover the heater.
 - ◇ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. children shall not play with the appliance.
 - ◇ Cleaning and user maintenance shall not be made by children without supervision
 - ◇ Children of less than 3 years should be kept away unless continuously supervised.
 - ◇ Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- CAUTION** — Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- WARNING:** This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

FAN HEATERS

USER INSTRUCTIONS

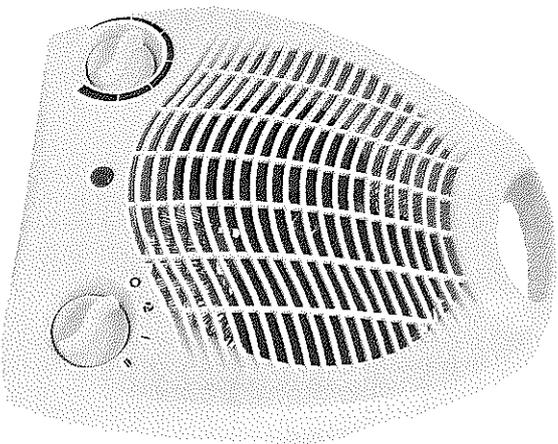

Model UFH2T

220-240V ~ 50Hz 1800-2000W

FOR YOUR OWN SAFETY

1. Read all instructions before using the fan heater.
2. Only connect the fan heater to a single-phase socket with a mains voltage as specified on the rating plate.
3. This appliance meets the electromagnetic compatibility requirements specified in EN 55104/95 with regard to interference with radio and TV sets.
4. Do not leave your home while the appliance turned on: ensure that the switch is in OFF (O) position and the thermostat is in minimum position. Always unplug the appliance.
5. Keep combustible material such as furniture, cushions, bedding, paper, clothes, curtains etc. at least 1 metre away from the fan heater.
6. If wall mounted, do not fix to combustible material such as wooden, synthetic or plastic surfaces. Do not hang anything on or in front of the fan heater.
7. Always unplug the heater when not in use. Do not pull the cord to unplug the heater.
8. Keep the air inlet and outlet free from objects at least 1 m in front and 50 cm behind the heater.
9. Do not install the heater below an electrical socket.
10. Do not let animals or children touch or play with the fan heater. Pay attention! The air outlet gets hot during operation (more than 80°C, or 175 F).
11. Do not cover. If covered, there is the risk of overheating and failure.
12. Do not use this fan heater in the immediate surroundings of a bath, a shower or a swimming pool.
13. Do not use the fan heater in the rooms with explosive gas or while using inflammable solvents, varnish or glue.
14. If the cord of this appliance is damaged discontinue use of this product and contact the manufacturer for further instructions.
15. Keep the fan heater clean. Do not allow any objects to enter any ventilation or exhaust opening as this may cause electric shock, fire or damage to the heater.

INSTALLATION

The appliance requires no installation: it should be used solely as a portable appliance. Portable appliances are not suitable for use in a bathroom.

OPERATION

- Turn the thermostat knob (right) in a clockwise direction until it reaches the maximum setting.
- Summer service (ventilation only): turn the knob to fan setting.
- Heating at reduced power: turn the knob (right) to setting II (1000W).
- Heating at full power: turn the (right) to setting II(2000W).
- Switching off: turn the knob (left) to setting O.

REGULATING THE THERMOSTAT

When the room has reached the required temperature turn the right thermostat knob (where included) in an anti-clockwise direction up to the point where the appliance switches off and not beyond. The temperature fixed in this way will be automatically regulated and kept at a constant level by the thermostat.

CLEANING AND MAINTENANCE

Before cleaning always remove the plug from the electrical socket.
Clean the air inlet / outlet grilles frequently.
Never use abrasive powders or solvents.

WARNINGS

- Do not use the appliance in the vicinity of showers, bath tubs, wash basins, swimming pools, etc.
- Always use the heater in an upright position.
- Do not use the heater to dry your laundry. Never obstruct the intake and outlet grilles (danger of overheating and failure).
- The heater must be positioned at least 50 cm from furniture or other objects.
- When the appliance is used in portable version, do not place it up against walls, furniture, curtains, etc.
- The appliance must be installed so that the switches and other controls cannot be reached by persons using the bath tub or the shower.
- Replacement of the feed cable must be entrusted only by a technician authorized by the manufacturer, because such work requires special tools.
- The appliance must not be positioned directly underneath a fixed power point.
- Do not use the appliance in rooms less than 4m² area.

The heater is fitted with a safety device which will switch off the heater in case of accidental overheating (eg. obstruction of air intake and outlet grilles, motor turning slowly or not at all). To reset, disconnect the plug from the power for a few minutes, remove the cause of overheating then plug the appliance in again.

