



INTERIOR
USE ONLY



FREE-
STANDING



SPEED
SETTINGS



THERMAL
PROTECTION



INSTRUCTION/OPERATION MANUAL

Product Codes: WL16RT



IMPORTANT SAFEGUARDS

Before using this product, ensure you read and follow these instructions carefully, even if you feel you are familiar with the product. The instructions contain important information concerning the use of this product, installation, safety and maintenance.

Please retain instructions for future use and reference.



CED
ELECTRICAL
GROUP

UK: 44 - 48 FRESHWATER ROAD, DAGENHAM, ESSEX, RM8 1RX
Te: 0208 503 8500 | W: www.cedelectrical.co.uk
EU: CED 46 Rosemount Business Park Dublin. D11 K26W. Ireland

CAUTION

Read Rules for Safe Operation and Instructions Carefully.

WARNING

 
1. If the supply cord is damaged, it must be replaced by manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
2. Indoor use only.
3. To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid.
4. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
5. When the appliance is not in use and before cleaning, unplug the appliance from the outlet.
6. When the fan was assembled, the rotor blade guard shall not be taken off anymore.
7.  Correct Disposal of this product
This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

RULES FOR SAFE OPERATION

1. Never insert fingers, pencils, or any other object through the grille when fan is running.
2. Disconnect fan when moving from one location to another.
3. Be sure fan is on a stable surface when operating to avoid overturning.
4. DO NOT use fan in window, rain may create electrical hazard.
5. Household use only.




PART FIGURE

- 1) Screws
- 2) Hanging Bracket
- 3) Motor control Assembly
- 4) Rear guard
- 5) Rear guard nut
- 6) Fan blade
- 7) Fan blade nut
- 8) Front Guard
- 9) Safety screw
- 10) Swivel brackets
- 11) Bracket fix
- 12) Plastic protector
- 13) Control panel
- 14) Remote control
- 15) Guard Ring

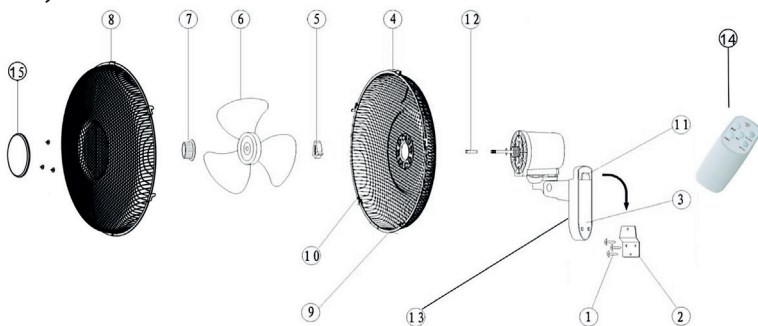

GRILL & FAN BLADE ASSEMBLY

   
1. Unscrew the spinner clockwise (or take the spinner out from the bag) and the plastic nut counterclockwise to remove both of them. Fix the rear grill to the motor then tighten the plastic nut again. (Fig. 1)
2. Insert the blade into shaft, and make sure the rotor shaft pin is fitted into groove of the blade. Turn the spinner counterclockwise to tighten the blade. (Fig. 2)
3. Fasten the front grill and the rear grill by the grill clip and then tighten the fan grill locking screw and nut. (Fig. 3)

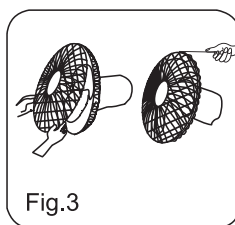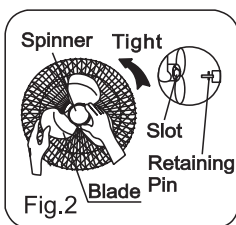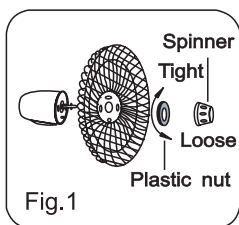

OPERATING INSTRUCTION

MOUNTING ON THE WALL

 
Secure the supplied bracket (A) on the wall by using wooden screw or plastic screw, make sure the wider opening should be upward, insert the hook of the wall fan into the bracket slot.

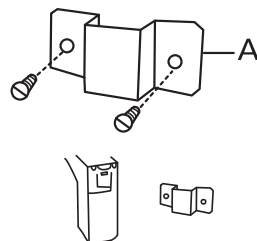

SPEED ADJUSTMENT

Switch on/off the fan and Adjust to the desired speed by pulling the switch cord (B).

 0---Off 1---Low
2---Medium 3---High

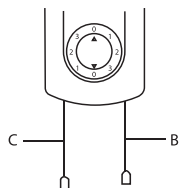


OSCILLATION CONTROL

Pull switch cord (C) to start and stop fan oscillation.

TO ADJUST THE WIND DIRECTION

 Push the guard lightly to the desired up or down direction.

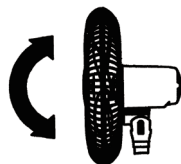

MAINTENANCE INSTRUCTION

The fan requires little maintenance. Do not try to fix it by yourself. Refer it to qualified service personnel if service is needed.

1. Before cleaning and assembling, fan must be unplugged.
2. To ensure adequate air circulation to the motor, keep vents at the rear of the motor free of dust. Do not disassemble the fan to remove dust.
3. Please wipe the exterior parts with a soft cloth soaking a mild detergent.
4. Do not use any abrasive detergent or solvents to avoid scratching the surface.
Do not use any of the following as a cleaner: gasoline, thinner.
5. Do not allow water or any other liquid into the motor housing or interior parts.

CLEANING

1. Be sure to unplug from the electrical supply source before cleaning.
2. Plastic parts should be cleaned with a soft cloth moisten with mild soap.
Thoroughly remove soap film with dry cloth.

PLUG REPLACEMENT

 
This appliance is supplied with a BS1363 3 pin plug fitted with a 3Amp fuse. Should the fuse require replacement, it must be replaced with a fuse rated at 3Amp and approved to BS1362.

In the event the mains plug has to be removed/replaced for any reason, please note:

IMPORTANT: The wires in the mains lead are coloured in accordance with the following code:

Blue – Neutral

Brown – Live

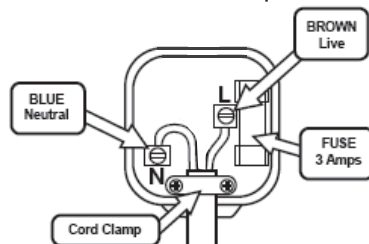

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows. The blue wire must be connected to the terminal marked with an N or coloured black. The brown wire must be connected to the terminal marked with an L or coloured red.

WARNING: Never connect live or neutral wires to the earth terminal of the plug.

NOTE: If a moulded plug is fitted and has to be removed take great care in disposing of the plug and severed cable, it must be destroyed to prevent engaging into a socket.

RULES FOR SAFE OPERATION

1. Never insert fingers, pencils, or any other object through the grille when fan is running.
2. Disconnect fan when moving from one location to another.
3. When the fan is assembled, the fan guard shall not be taken off anymore.
4. Be sure fan is on a stable surface when operating to avoid overturning.
5. **DO NOT** use fan in window, rain may create electrical hazard.
6. Indoor use only.

OPERATING INSTRUCTION

Speed control

Speed is controlled by the button switch. (-0 -1 -2 -3)

0-Off 1-Low 2-Medium 3-High

Oscillation control

To make the fan oscillate, push down on the oscillation knob located on the top of the motor housing. To stop the fan from oscillating in the position desired, push on the oscillating knob once more.

Tilt control

The airflow can be adjusted upward or downward by tilting the fan head to a vertical angle as desired.

MAINTENANCE INSTRUCTION

The fan requires little maintenance. Do not try to fix it by yourself. Refer it to qualified service personnel if service is needed.

1. Before cleaning and assembling, do not plug the pins into the socket.
2. To ensure adequate air circulation to the motor. Keep vents at the rear of the motor housing from dust, fluff and etc. A vacuum cleaner can not be used to clean these vents before unplug. Do not disassemble the fan remove fluff.
3. Please wipe the exterior parts with a soft cloth soaking a mild detergent.
4. Do not use any abrasive detergent or solvents to avoid scratching the surface.
- 5 Do not use any of the following as a cleaner: gasoline, thinner, bending.
- 6 Do not allow water or any other liquid into the motor housing or interior parts.

CLEANING

1. Be sure to unplug from the electrical supply source before cleaning.
2. Plastic parts should be cleaned with a soft cloth moisten with mild soap. Thoroughly remove soap film with dry cloth.

DISPOSAL

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

