


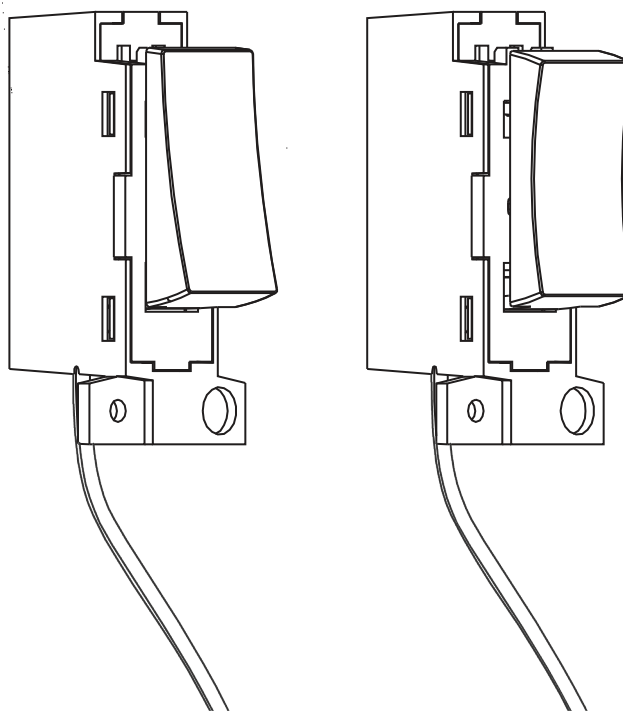

Click Mini-Grid Kinetic Switches

CUL 44764

CUL 44765

CUL-45734

CUL-45735

CUL-45736

CUL-45737

CUL-45738

CUL-45739



This product should be disposed of responsibly at the end of its life. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice (Waste Electrical and Electronic Equipment Directive)



 
CHL, GORSE MILL, OL9 9RJ
www.cascadehl.com/#contact

EU Authorised Representative: Authorised Rep Compliance,
Ground Floor, 71 Lower Baggot Street, Dublin, Ireland,
D02P593. www.authorisedrepcompliance.com




A. What is in the box ?

1 Gang



x 1

 
2 Gang



x 1

or

 Compatible with Click Mini-Grid yokes (Available seperately)



x 1



x 2





x 1



x 2

B. Specifications And Installations

Dimensions:

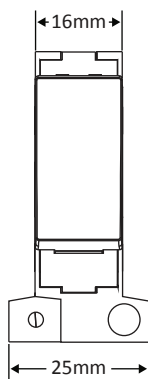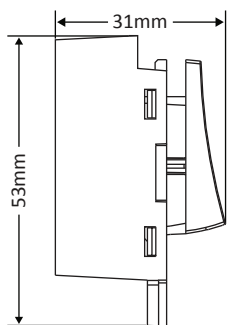

Power Source: Self Powered (Kinetic)
Radio Frequency: 433 MHz
Switching Type: Push Switch

Dimming Type:
Push Selected

IP Rating: IP20

Body Material:

Polycarbonate

Weight:

22g

Transmission Range:

Outdoor 60m (no barrier)

Indoor 30m (plaster board; drywall)

Indoor 15m (concrete, glass walls)

(Range may vary depending on surrounding situation)



Install on or close to metal surface would decrease the transmission range significantly. Suggest to keep away from metal surface at least 1m to get the best performance.

UK




CE

RoHS




C. Compatible Receivers (Order seperately.)

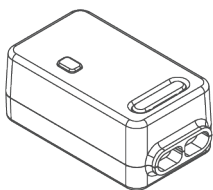


ON / OFF Receiver

CUL-40038

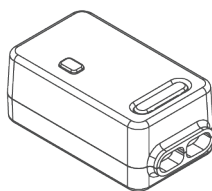


ON / OFF Receiver
Tuya Wifi (2.4G)

CUL-40039

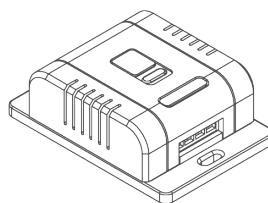

Dimmer Receiver
Tuya Wifi (2.4G)

CUL-40040

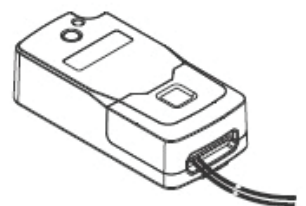

ON / OFF Receiver
CUL-45728

ON / OFF + Wi-Fi

CUL-45729

2 CH On/ Off + Wi-Fi


CUL-45730

Dimmable + Wi-Fi

CUL-45731

D. Operation

1 Gang

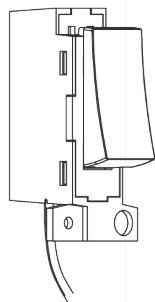


ON / OFF Switch



Single press to
turn on / off


2 Gang

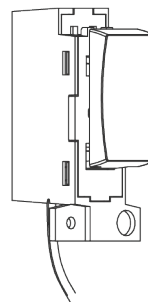

Dimmer or 2 Gang ON
/ OFF Switch (Dimmer
function only work with
Dimmable receiver)

①

 Press once to dim,
Press again to set
brightness.




Single press to
turn on / off

or

②

 1 Gang Press to
turn on / off




2 Gang press to
turn on / off

E. Pairing with Receiver



Pairing to Receiver - Standard method

①

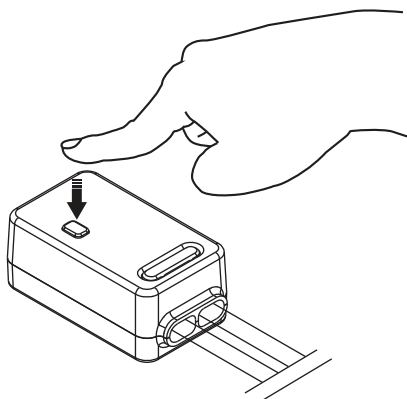

Press the Pairing Key for 3-4s, until
the RED indicator flashes slowly.

 ②

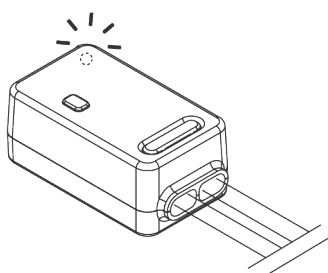

While the indicator on receiver flashes, press the
Kinetic switch ONCE to complete the pairing.