

READ THESE INSTRUCTIONS
THOROUGHLY BEFORE

INSTALLATION KEEP THESE

INSTRUCTIONS FOR FUTURE REFERENCE.

IMPORTANT:

This product must be installed

by a qualified electrician or

competent person, and in

accordance with current building

and IET wiring regulations.

BOX CONTENTS

This lighting fixture has been properly packed to avoid damage during

transit. Before commencing with the

installation carefully inspect the

luminaire to confirm there is no

damage. DO NOT INSTALL if any

PebleyUtility Round 3CCT Bulkhead









Technical Helpline: +44 (0)1507 328031












INSTALLATION INSTRUCTIONS

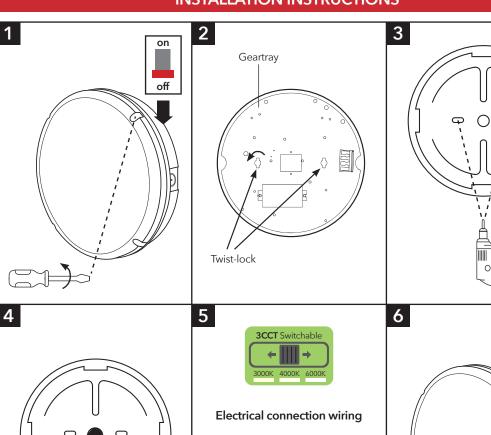

PLEASE READ THESE INSTRUCTIONS BEFORE INSTALLATION.



WARNING: Risk of electric shock! Isolate the mains power before proceeding.

- Turn off the mains power before performing inspections, installation, or removal
- Verify that the supply voltage is correct by comparing it with the luminaire label information
- It is the installers responsibility to ensure installation is suitable for the total load of the luminaire(s). The supply cable, fuses/circuit brakers must be correctly rated for the electrical load and considering for any transient inrush currents that may occur
- Do not perform insulation strength or resistance tests on installed luminarie(s) connected
- 1. Remove the four screws securing the diffuser
- 2. Twist the locking tab to loosen and remove the geartray.
- 3. Drill appropriately sized holes through your chosen mounting points in the base
- 4. Install grommet to your chosen cable entry and pierce, making a hole just large enough to make a tight fit around the incoming mains cable. Carefully thread cable through grommet and secure fitting in place
- Wire as per diagram (5). Select colour temperature (Please see overleaf for instructions on how to set all sensor versions and emergency)
- 6. Replace the geartray and twist the locking tab to secure in place, then refit the diffuser and re-connect the mains supply

damage has occurred to the fixture or any of its components. • Light Fitting

- Instruction Manual
- Fixings

TOOLS REQUIRED



Drill




Screwdriver



Cable



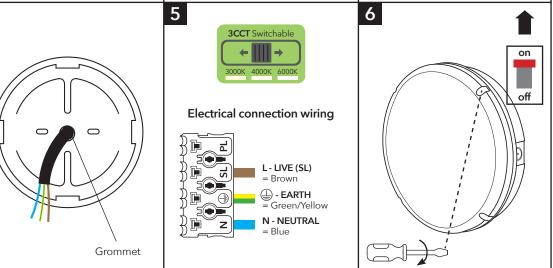



DISPOSAL

Disassembly instructions for end of life disposal available on website.

Disposal of Electronic Equipment WEEE Directive 2002/96/EC This product falls within the scope of the Waste Electrical & Electronic Equipment Directive (WEEE), which means the product should not be disposed of as normal household waste. Please recycle where facilities exist or check with your Local Authority. RoHS - All components and materials used in this product are RoHS 2002/95/EC compliant.

Specifications may change from time to time. The information contained in this leaflet is for guidance only and should not be considered as always accurate and should be treated as not representative.

WARRANTY

This luminaire is warranted for a period of 5 years from the date of purchase**. The backup battery pack in the emergency version is warranted for a period of 24 months. The warranty could be invalidated should the light fitting not be installed according to these instructions, outside the scope of the specification or the product has been altered or tampered with in any way. Please see website for terms and conditions.

PRODUCT TEMP SPECIFICATION

Standard -20 to +40°C

Emergency 0 to +30°C

Pebley Utility Round 3CCT Bulkhead



MICROWAVE SENSOR SETTINGS

Detection Range: This determines the effective range of the motion. Note that reducing the sensitivity will also narrow the detection range.

Hold Time Duration: This determines the time the fitting remains at 100% illumination following motion detection.


Daylight Setting: This setting holds off the 100% light output should there be sufficient daylight.

STANDARD ON/OFF SENSOR

DETECTION AREA						НС	DLD T	IME		DAYLIGHT SENSOR					
	1	2	3			4	5	6			7	8	9		
Ι	ON	ON	ON	100%	Ι	ON	ON	ON	5s	- 1	ON	ON	ON	2Lux	
Ш	-	ON	ON	75%	П	-	ON	ON	30s	II	ON	ON	-	10Lux	
III	ON	-	ON	50%	III	ON	-	ON	90s	III	-	ON	-	25Lux	
IV	-	-	ON	25%	IV	-	-	ON	3min	IV	ON	-	-	50Lux	
V	-	-	-	10%	V	ON	ON	-	20min	V	-	-	-	Disable	
					VI	-	-	-	30min						

Part No.	Description	Watts	L(mm)	W (mm)	H (mm)	Weight							
430159- WH	Pebley Round Bulkhead	12W	300	300	92	0.7Kg							
430159- BL	Pebley Round Bulkhead	12W	300	300	92	0.7Kg							

 PERI FY RUI KHEAD DIMENSIONS



STEP DIM DRIVER SETTING	S
-------------------------	---

DETECTION AREA HOLD TIME			DAYLIGHT SENSOR				STAND-BY PERIOD				STAND-BY			* OUTPUT CURRENT							
	1			2	3			4	5			6	7		DIM LEVEL			S1	S2	S3	
-	ON	100%	T	ON	ON	5S	Т	ON	ON	Disable	П	ON	ON	0s		8		450mA	ON	ON	ON
Ш	-	50%	II	ON	-	905	Ш	ON	-	30 Lux	Ш	ON	-	30s		ON	10%	400mA	ON	-	ON
			III	-	ON	3min	III	-	ON	15 Lux	III	-	ON	10min		_	25%	380mA	-	-	ON
			IV	-	-	10min	IV	-	-	5 Lux	IV	-	-	+∞				350mA	-	ON	-
																		320mA	ON	-	-

^{*} Do not change output current unless instructed or this will void warranty. 300mA

Installation Engineers Contact De	Luminaire Reference / Location	
Name:	Tel:	

Luminaire Details:	Full Recharge Duration 24 Hours	Emergency Duration 3 Hours	Lamp Type LED

ROUTINE TEST RECORD													
Type Test	Year 1		Year	2	Year	3	Year	4	Year	5			
	Signed Date		Signed	Date	Signed	Signed Date		Date	Signed	Date			
Functional 1													
Functional 2													
Functional 3													
Functional 4													
Functional 5													
Functional 6													
Functional 7													
Functional 8													
Functional 9													
Functional 10													
Functional 11													
3hr Duration 12													

Wiring instructions for units equipped an with EMERGENCY function

Emergency lighting luminaries must be installed and maintained in accordance with the emergency lighting standard BS 5266-1

- 1. Connect incoming earth cable to 'Earth' terminal on connector block.
- 2. Connect incoming neutral cable to 'Neutral' terminal on connector block.
- 3. For the emergency unit to work correctly, please ensure that an uninterrupted permanent live feed is present and is connected directly to the 'Permanent Live' terminal of the mains terminal block. Please ensure there are no switches, PIRs etc within the permanent live feed, constant switching of the emergency pack could result in premature battery failure.
- 4. Connect incoming switched live cable to the terminal marked "Switched Live"

NOTE: If there is no switch live feed and the unit has a microwave sensor, simply bridge across from the "Permanent Live" to the Switch Live" on the mains terminal block.

- 5. There should be a loose flying lead connected to the battery. This needs to be attached to the flying lead from the emergency control unit.
- Following power up the green LED indicator should illuminate to indicate charging. If power to the unit is disrupted or isolated, the unit indicating green LED will switch off, triggering the emergency LEDs to illuminate.
- 7. Please allow 24 hours charge before first emergency test.

EMERGENCY FITTINGS ONLY.

CONNECTION

REQUIRED.

EARTH



PL - PERMANENT LIVE = Black

L - LIVE (SL)
= Brown

- EARTH
= Green/Yellow

> N - NEUTRAL = Blue

This product contains a light source of energy efficiency Class E.