

Installation Instructions


Typhoon Plug & Play Anti-Corrosive

Input	220-240V AC 50/60Hz
Power	19/20/30/43/50W
Operating Temp	-20°C -+40°C
Connection Type	Push-Fit Terminal
Emergency Option	430962 (Sold Separately)
Control Connection	N/A
Light Source Energy Rating	C



Dimensions:

Part No.	Description	L (mm)	W (mm)	H (mm)	Weight
431310	Typhoon 19W 4ft Single	1240	100	84	1.25Kg
431311	Typhoon 30W 4ft Twin	1240	100	84	1.25Kg
431312	Typhoon 20W 5ft Single	1540	100	84	1.5Kg
431313	Typhoon 43W 5ft Twin	1540	100	84	1.5Kg
431314	Typhoon 30W 6ft Single	1840	100	84	2Kg
431315	Typhoon 50W 6ft Twin	1840	100	84	2Kg

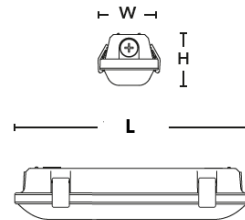

Box Contents:

- Typhoon Anti-Corrosive
- Fixing Kit



Beam Angle



Professionally Replaceable



Professionally Replaceable



Class I



Ingress Protection

Tools Required For Installation:

- Wire Strippers / Cutter



READ THESE INSTRUCTIONS THOROUGHLY BEFORE INSTALLATION

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

IMPORTANT:

This product must be installed by a qualified electrician or competent person, and in accordance with current building and IET wiring regulations.

Warranty:

This luminaire is warranted for a period of 5Years from the date of purchase**. The warranty could be invalidated should the light fitting not be installed according to these instructions, outside the scope of the specification or the product has been altered or tampered with in any way. Please see website for terms and conditions.



WARNING: Risk of electric shock!
Isolate the mains power before proceeding.

- Turn off the mains power before performing inspections, installation, or removal
- Verify that the supply voltage is correct by comparing it with the luminaire label information
- It is the installers responsibility to ensure installation is suitable for the total load of the luminaire(s). The supply cable, fuses/circuit breakers must be correctly rated for the electrical load and considering for any transient inrush currents that may occur.
- Do not perform insulation strength or resistance tests on installed luminaire(s) connected

Wiring instructions for units equipped with EMERGENCY function:

Emergency lighting luminaire must be installed and maintained in accordance with the emergency lighting standard BS 5266-1

- For the emergency unit to work correctly, please ensure that an uninterrupted permanent live feed is present and is connected directly to the 'Permanent Live' terminal of the mains terminal block. Please ensure there are no switches, PIRs etc within the permanent live feed, constant switching of the emergency pack could result in premature battery failure.
- Following power up the green LED indicator should illuminate to indicate charging. If power to the unit is disrupted or isolated, the unit indicating green LED will switch off, triggering the emergency LEDs to illuminate.
- When self-test mode is selected, 24hrs from connection to mains power, a 3hrs duration test will be performed automatically.

Installation Procedure:

1. Install the fitting in desired location.
2. Open the fitting by undoing the fastening clips.
3. Thread the incoming power cable through the cable gland.
4. Connect mains to terminal block as indicated – Standard version.
5. Connect mains to terminal block as indicated – Emergency version.
6. Re-fit the diffuser & secure with the fastening clips.
7. Reconnect the mains supply.

