


## SYCAMORE

## INSTALLATION MANUAL - MODEX INTRA

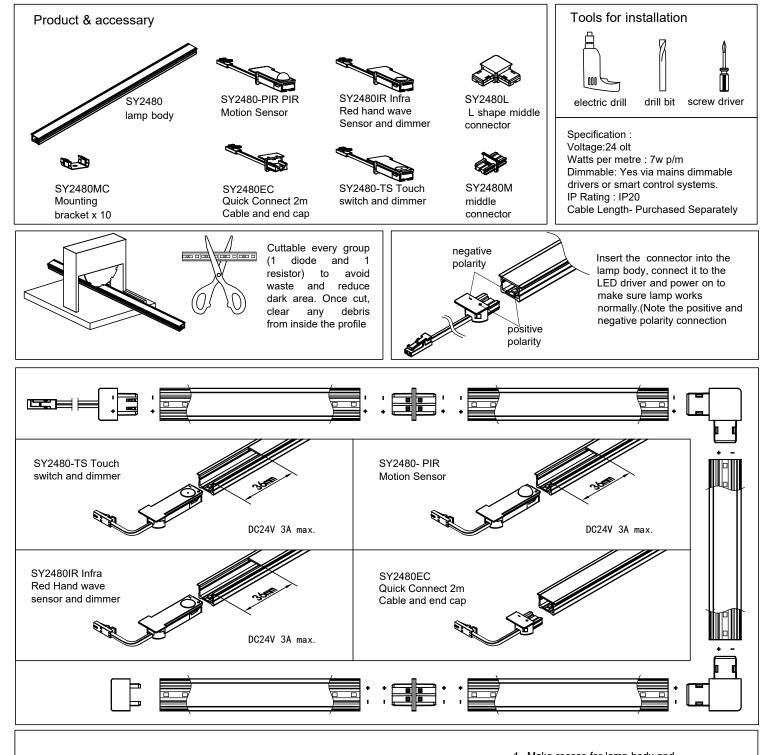

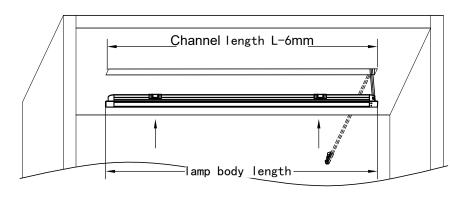

- 1. Make recess for lamp body and wire on the surface with milling tool.
- 2. Drill hole for wire with a milling tool on the board surface.
- 3. Clamp the lamp body into the slot as picture shown












## SYCAMORE

## **INSTALLATION MANUAL - Modex Intra**

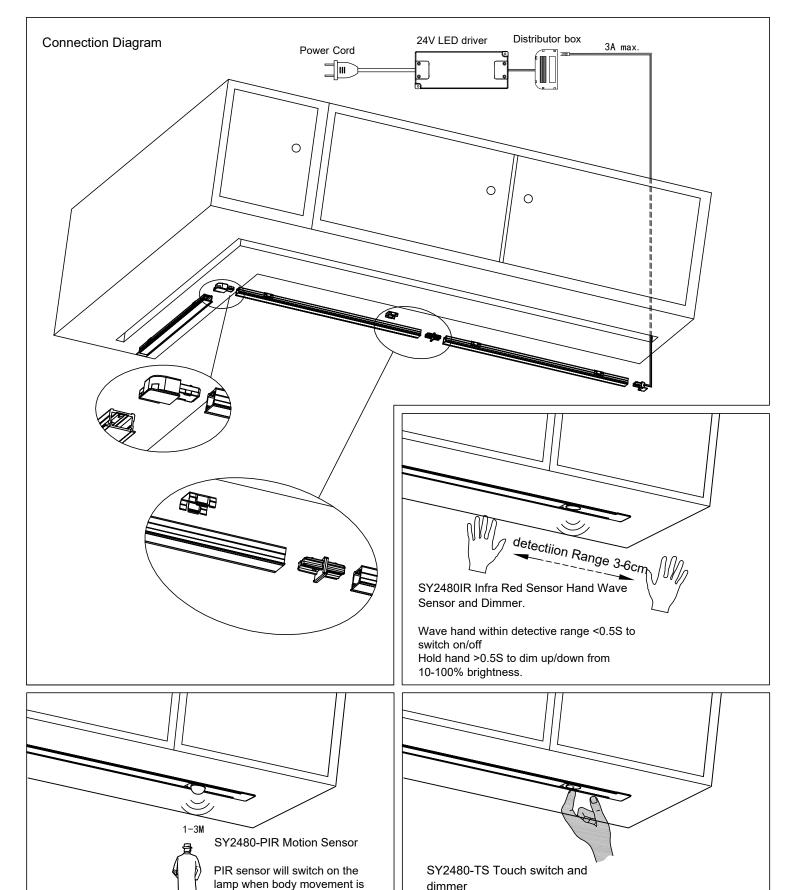

detected within a range of 1-3M,

and automatically switches off

the lamp after no movement is

detected for 45s.







Short touch < 0.5s to switch on/off

Hold >0.5s to dim up/down from

10-100% brightness.