





Intumescent Gasket IP.114 With Standard Rail



121218

www.rutlanduk.co.uk

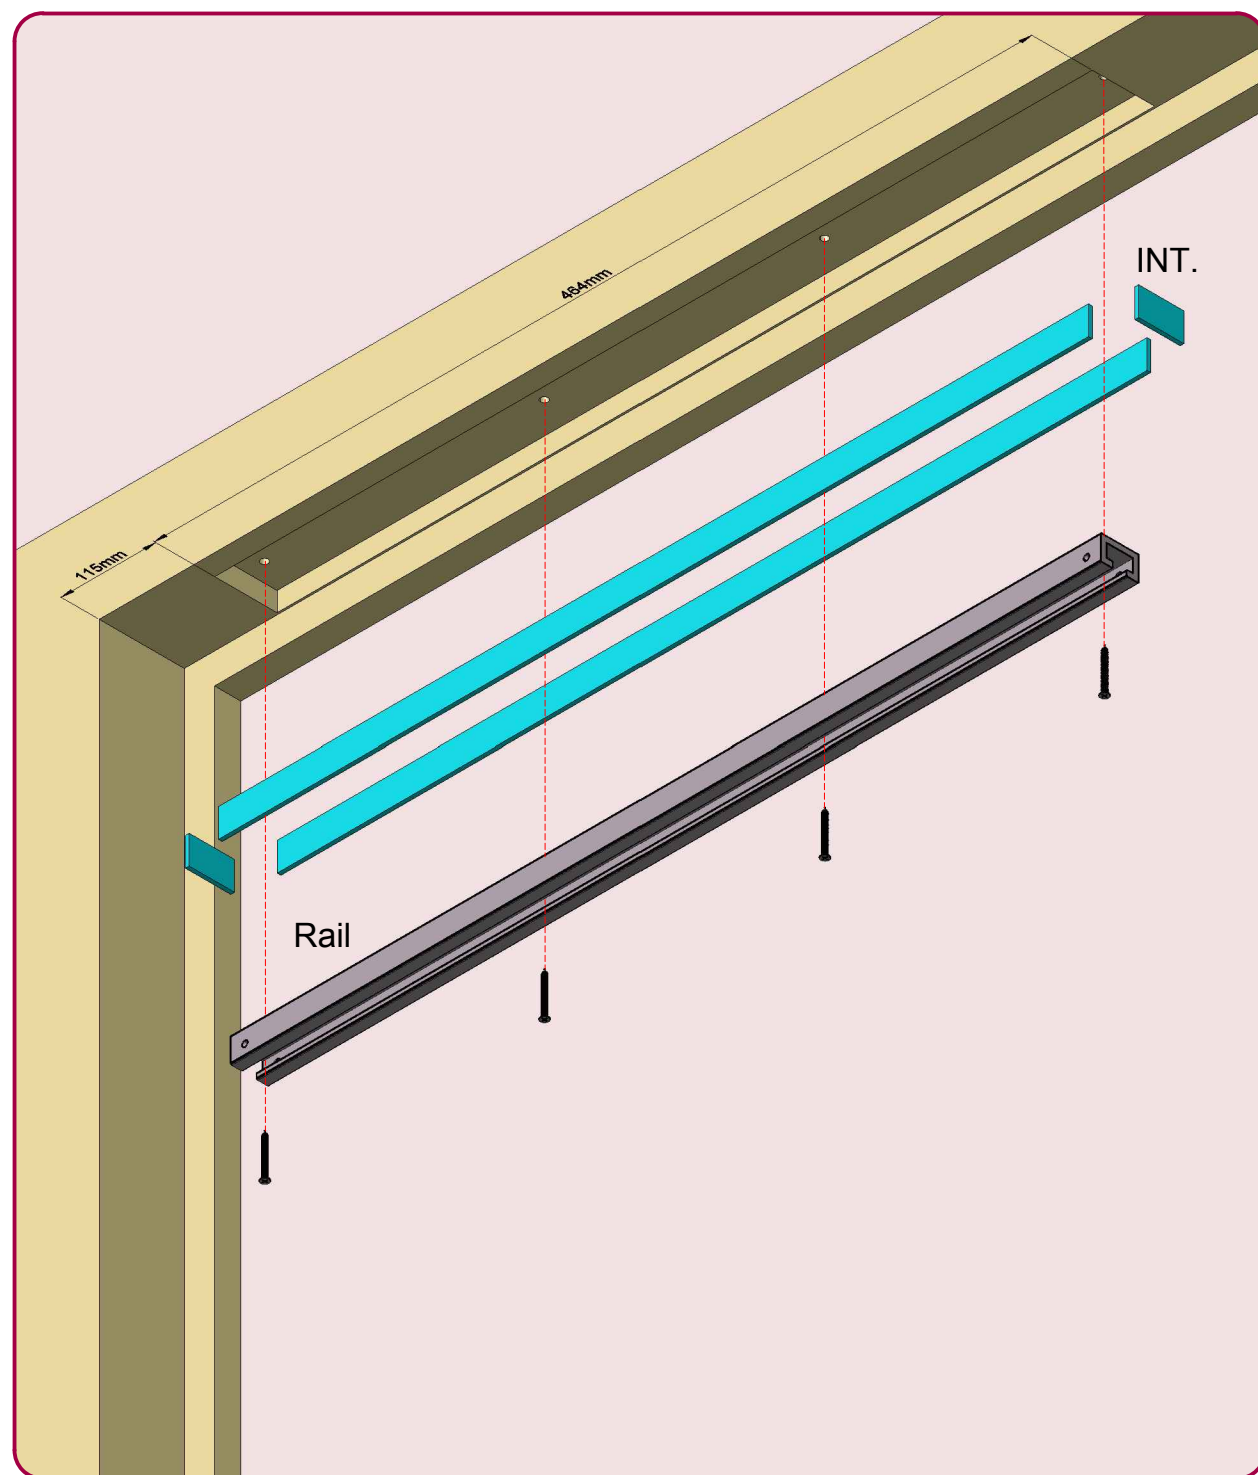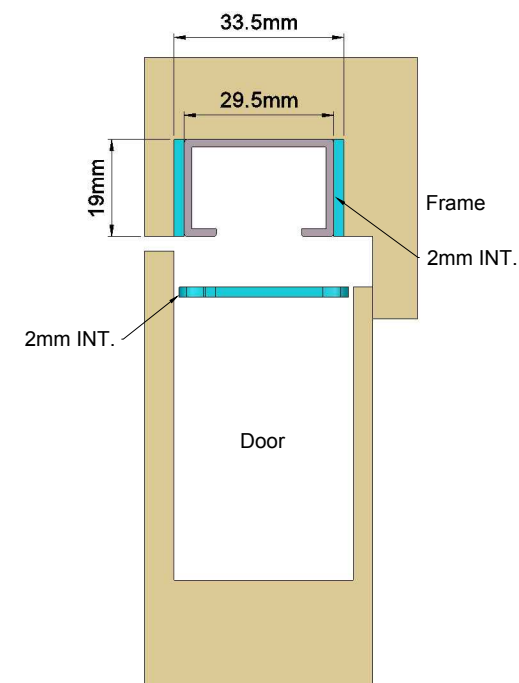


1


Mortice out the door and frame to the template + measurements.

2

Remove self adhesive backing.

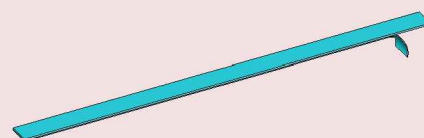


Stick on all sides of rail.

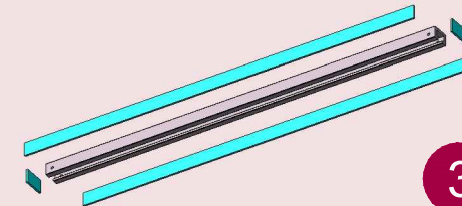

3


4

Insert into the frame with shuttle and stop block included.*

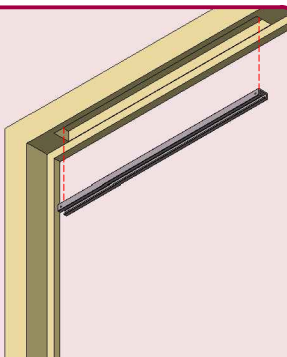


Remove self adhesive backing.

5

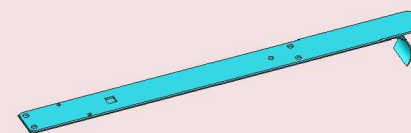

Stick on top of the door.

6

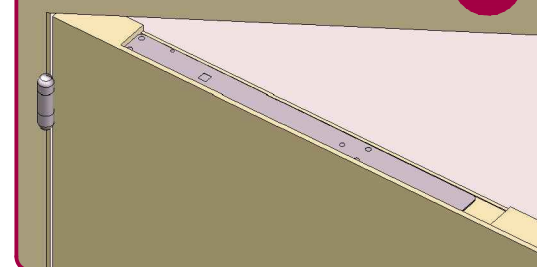

THE PINION BOLT MUST BE TIGHTENED TO 12NM

*THE HOLD OPEN DEVICE MUST BE REMOVED WHEN FITTING ON A FIRE DOOR

RUTLAND © 2016