

Installation Instructions: LED Emergency High Power IP65 Twin Spot (09159/09102)


Date	Revision
08.04.2026	1

Important Information

We recommend that luminaires are installed by a qualified electrician ensuring the installation complies with current IEE wiring regulations & local building control.

- All tests should be carried out in accordance with current emergency lighting regulations.
- BELL Lighting will not accept responsibility for any claims arising from poor installation.
- The operating temperature should be between 0 and 35°C.
- Ensure that there is adequate free air ventilation around the fitting.
- Do not cover with insulation.
- Always switch off mains supply before installing.
- Mount to a stable, secure surface that is rated for the weight of the luminaire.
- Not suitable for ATEX hazardous zones (explosive atmospheres).
- To ensure optimum performance, keep the front diffuser clean. Wipe with a soft, damp lint free cloth. Do not use soaps, detergents, solvents or abrasive materials.
- Only use battery as supplied.
- If the lighting fails within 3 hours of an emergency discharge test, the battery is to be replaced. Contact your local distributor for a suitable replacement.
- Not intended for use by children.

This product may contain substances that can be hazardous to the environment if not disposed of properly. Electrical and electronic equipment should never be disposed of with general household waste but must be separated for its correct treatment and recovery. Where possible, recycle your packaging.



Read these instructions before installation and retain for future reference. This equipment should be installed by a competent electrician

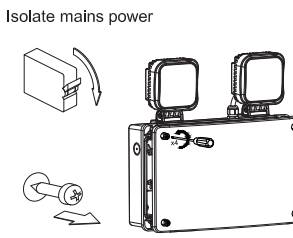
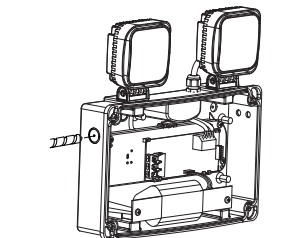
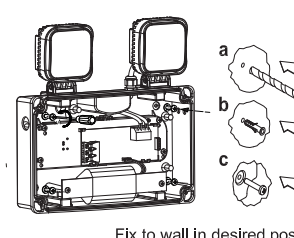
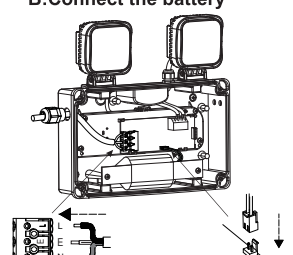
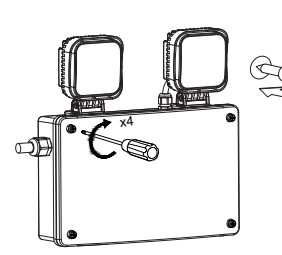
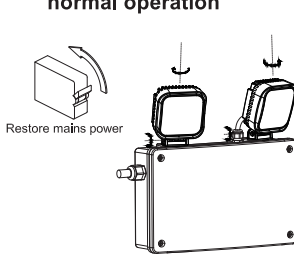


Installation:


1. Connect mains supply wiring as follows.
2. Power & battery wires should be connected.
3. Switch on 220-240V AC supply and check that the green LED indicator illuminates to confirm charging of batteries.
4. Allow a short period for part charging of the batteries and then isolate the mains supply to the fitting in order to check the correct operation of the fitting in emergency mode. When the first use, after a continuous charge for 36 hours, a mains failure should be simulated to ensure that the fitting work for its specified time(only at a safe & appropriate time). The fitting will be fully charged with in 24 hours.



Conducting additional manual tests of self-test fittings may significantly reduce battery life

① Unscrew the four screws Isolate mains power 	② Drill the 20mm cable entry 	③ Drill the fixing holes  Fix to wall in desired position
④ A: Connect to the mains supply B: Connect the battery 	⑤ Refasten the cover 	⑥ Switch on and check the normal operation Restore mains power 

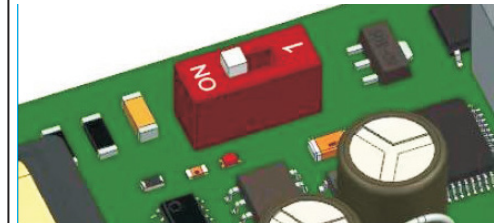The instruction of the switch on PCB.
On indicates standard mode
1 indicates self-test mode
Please make sure that switch position is set before installation.



RECOMMENDED ROUTINE TEST PROCEDURE

The following test are designed to ensure the continued protection of your premises and occupants. Because of the possibility of a failure of the normal lighting supply occurring shortly after a period of testing, all tests should, whenever possible, be undertaken at times of least risk, e.g. during daylight hours.

ONCE A DAY

Visual inspection of battery charge led.

ONCE A MONTH

Each unit should be energised from it's battery for adequate time to ensure, by simulation of a failure of the normal lighting supply, the emergency mode is functioning correctly.

ONCE EACH YEAR

All units should be placed into emergency mode and checked that the duration provided by the battery meets the specified time period.

British Electric Lamps Ltd
BELL House, Foxbridge Way, Normanton Industrial Estate
Normanton, West Yorkshire. WF6 1TN

BELL Ireland
Marina House, Clarence Street, Dun Laoghaire
County Dublin, Ireland, A96 AX76

T: +44 (0)1924 893380 F: +44 (0)1924 894320
E: sales@belllighting.co.uk

www.belllighting.co.uk

Technical Helpline +44 (0)1924 893380

www.belllighting.co.uk

Self-Test

Self-Test fittings perform a self-commissioning test at first power on. After charging for 24 hours a full duration test (3 hours) is performed. Initial function and duration tests are randomly generated. They are then performed in accordance with standard requirements (every 30 days for function tests and every 52 weeks for duration tests).

A single bi-colour indicator LED is fitted in all Self-Test products. This LED is clearly visible for manual inspection. It indicates the module status. The LED shows permanent green or flashing green when conditions are normal and flashing red if a fault condition is present

Function test

A function test is a 2 minutes test that simulates a mains failure and checks the operation of the emergency light source from the battery supply.

The local indicator LED slow flashes green whilst the 2 minutes function test is in progress.

If there is a failure during a function test the local indicator LED changes to a flashing red.

Duration test

A duration test simulates a mains failure. It also checks the operation of the emergency light source from the battery supply for the rated duration of the module.

The local indicator LED fast flashes green whilst the duration test is in progress.

If there is a failure during a duration test the local indicator LED either changes to flashing red. The battery is required to be fully charged before a duration test can be started.

The test button of the unit has the following functions:

Test Button	Green LED	Status
Press for approx 1 Second	Off	Emergency mode for 1 second
Press for approx 5 Seconds	Slow flash	Function for 30 seconds
Press for approx 7 Seconds	Fast Flash	3 Hour duration test
Press for approx 10 Seconds		End the duration test

Please refer to following chart below for more complete description/fault indication:

Test Button	Green LED	Status
Green solid	Mains on / No fault	
Green flash	Slow flash	Function for 2 minutes
	Fast flash	3 hour duration test
Red flash	1 Flash cycle	Battery fault
	2 Flash cycle	Lamp fault
	3 Flash cycle	Duration test fault

Conducting additional manual tests of self-test fittings may significantly reduce battery life

Specification

- Input Voltage: AC220-240V 50/60Hz
- Wattage: 2X 7W
- Power Factor: 0.75PF, supply current: 400mA
- Lumens: 1900lm
- Battery installed/replaced: LiFePO4 9.6V 6000mAh
- Maximum Ambient Temperature: 35°C
- Recharge Time: 24 hours
- Emergency duration: more than 3 hours

British Electric Lamps Ltd
BELL House, Foxbridge Way, Normanton Industrial Estate
Normanton, West Yorkshire. WF6 1TN

BELL Ireland
Marina House, Clarence Street, Dun Laoghaire
County Dublin, Ireland, A96 AX76

T: +44 (0)1924 893380 F: +44 (0)1924 894320
E: sales@belllighting.co.uk

www.belllighting.co.uk

Technical Helpline +44 (0)1924 893380

www.belllighting.co.uk

Testing & Commissioning for Emergency Luminaire

- Ensure the Load is connected.
- Connect the battery.
- Switch on the Unswitched Supply - Check the Charge LED illuminates.
- Switch on the Maintained Supply - Check the LED illuminates as normal.
- Switch off the Maintained Supply.
- Switch off the Unswitched Supply - Check the Charge LED extinguishes and the load LED illuminates at a reduced output.
- Enter the commissioning date on the Battery Pack. Switch on the Unswitched Supply

Luminaire Ref/Location _____			In Case of difficulty, contact the Installation Engineers:- _____ Tel: _____							
Full Recharge Time 24 Hours			Duration 3 Hours				Lamp Type - LED			
ROUTINE TEST RECORD										
	Year 1		Year 2		Year 3		Year 4		Year 5	
Monthly Test	Signed	Date	Signed	Date	Signed	Date	Signed	Date	Signed	Date
Functional										
Functional										
Functional										
Functional										
Functional										
Functional										
Functional										
Functional										
Functional										
Functional										
Functional										
Three Hour										

British Electric Lamps Ltd
BELL House, Foxbridge Way, Normanton Industrial Estate
Normanton, West Yorkshire. WF6 1TN

BELL Ireland
Marina House, Clarence Street, Dun Laoghaire
County Dublin, Ireland, A96 AX76

T: +44 (0)1924 893380 F: +44 (0)1924 894320
E: sales@belllighting.co.uk

Technical Helpline +44 (0)1924 893380

www.belllighting.co.uk

www.belllighting.co.uk