

IMT24H  
Size: 140(W) x 297(H) mm  
Paper Material: 100P鋼版紙  
Print color: Black text



Product Code: **IMT24H**  
**INSTRUCTION/INSTALLATION MANUAL**


Please read the instructions fully before attempting installation.

**IMPORTANT**  
*This unit should be installed to current IEE wiring regulations if in doubt consult a qualified electrician.*

- Timer must not be mounted on a flammable surface.
- Ensure that the timer does not come into contact with any combustible materials such as towels or bedding.
- Ensure at least a 300mm air space is allowed around the timer.

**FIXING THE TIMER TO THE WALL**

Drill two 6mm holes 97mm vertically apart in the wall. Insert plastic anchor (supplied) into holes and fit one No.6 screw to top hole leaving a gap under the screw head of approximately 4.75mm. Place the keyhole slot over the screw and slide the timer down; if the timer is loose remove it, tighten the screw and refit the timer. Continue to do this until the timer fits securely against the wall. Remove terminal cover “D” by undoing screw “C”. Insert the second No.6 screw into slot “B” and tighten. Your timer is now ready for wiring.

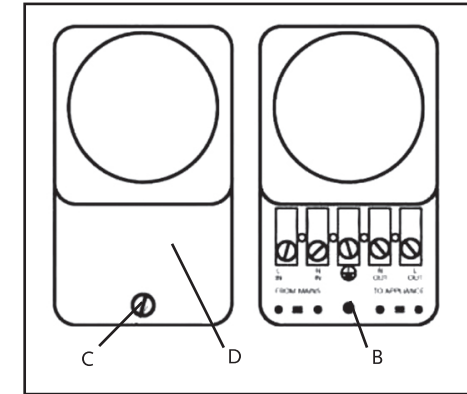

**WIRING THE TIMER**

The timer should be wired from a fused spur.

**Switch off the mains and isolate the supply by removing the appropriate fuse before starting the installation.**

Prepare cables for connection to the timer, (see Diagram A).

The maximum size cable that can be used with this timer is 2.5mm. If flat twin and earth cable is used the bare earth cable must be fitted with green/yellow sleeving before fitting the earth terminal.



Fit the bare wire ends into the correct terminals (see diagram B). You must ensure that there are no loose strands left out of the terminals.

**Firmly tighten all the screws.**

Using the cable clamps and screws provided and ensuring the cable clamp is fitted the correct way round, tightly secure the cable into position.

Ensure the correct cable cut-outs have been removed in terminal cover “D” and refit terminal cover “D” and tighten screw “C”.

**N.B. Check all terminal screws are tight.**

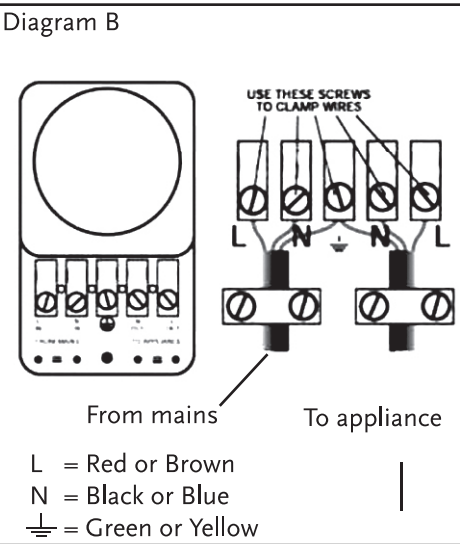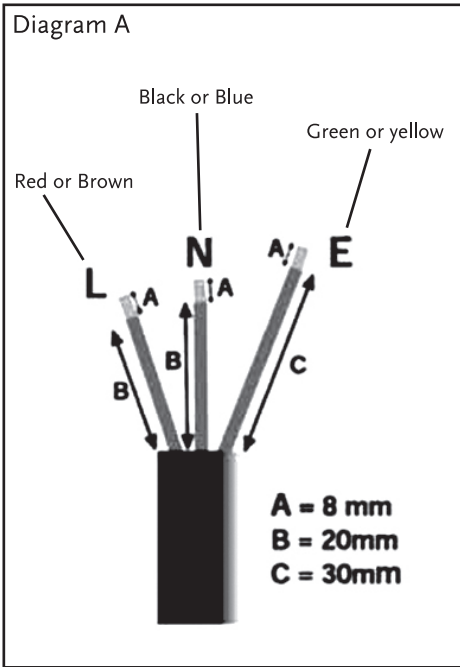

**SETTING THE CLOCK**

Turn the dial (by turning with finger and thumb) in the direction of the arrow (clockwise) until the correct time of day is exactly opposite the time set marker ➤ in centre of the dial.

**SETTING THE PROGRAMMES**

To set the ON periods push all the sliding segments away from the centre of dial, between your chosen on and off time. The timer will operate during the coloured section now exposed. Each slide represents 15 minutes. The timer will be in the OFF mode when the sliding segments are pushed towards the centre.

When switch is pushed towards:

- I = timer will be permanently ON
- ⌚ = in the centre of the slot. The timer will work to the set programme.

**TECHNICAL DATA**

Switching capacity:	230V AC 50Hz 16 amp (resistive) 2 amp (inductive)
---------------------	---

**GUARANTEE**

Your CED 24 Hour Mechanical Immersion Heater Timer is guaranteed for 12 months from the date of purchase. This does not affect your statutory rights.

**CE INFORMATION**  
ACTION TYPE: IB  
POLLUTION SITUATION: NORMAL  
CLASS 2 INSULATION:   
⌚ :MICRO-DISCONNECTION LIVE POLE ONLY

**PLEASE KEEP THESE INSTRUCTIONS SAFE FOR FUTURE REFERENCE**

**CED ELECTRICAL GROUP**  
UK: 44 - 48 FRESHWATER ROAD, DAGENHAM, ESSEX, RM8 1RX  
E: info@cedelectrical.co.uk | W: www.cedelectrical.co.uk  
T: 020 8503 8500 | F: 020 8503 8900  
EU: CED 46 Rosemount Business Park Dublin. D11 K26W