

V50™ Fire-rated Downlight

Installation instructions for V50™ Fire-rated Downlight



Warnings and cautions

- To avoid electric shock, serious injury or property damage, isolate power before installing, removing or servicing the product
- It is recommended that luminaires are installed by a qualified electrician and the installation complies with the local current wiring regulations.
- Any broken or damaged parts should be replaced as soon as possible. JCC will not accept responsibility for claims arising from sub-standard installations.
- It is recommended that the ambient room temperature should not exceed 26°C.
- Maximum ceiling thickness 30mm
- These products are designed for connection to a mains supply of 220-240V~ 50/60Hz
- The light source of this luminaire is not replaceable: when the light source reaches the end of its life the whole of the luminaire must be replaced.
- This luminaire is suitable for indoor use only.
- It may be necessary to upgrade your MCBs to allow for increased inrush current.
- This Fire-rated downlight can be loosely covered with mineral wool insulation
- Do not carry out insulation tests with the product connected to the circuit

INSTALLATION

ENGLISH

220-240V~ 50/60Hz / Class II

Colour Temperature: (WW)3000K* / (CW)4000K (Switchable)

Ra: 80

Product	Wattage	Lumens	LpcW	IP
Standard	6W	650*/700lm	108/116	IP65

Maximum number of fittings on a circuit is not to exceed 20

Bezel options: JC1006 - Brushed Nickel (BN), Chrome (CH), White (WH) Brushed Brass (BR), Black (BLK) ANTH (Anthracite) purchased separately.

- Read the instructions and ensure that you have all of the tools and accessories required to complete the installation correctly.
- Isolate power supply before starting the installation.

Installation Procedure


- Cut the mounting hole in the ceiling; if you are unfamiliar with this process JCC recommends that a sample hole is cut in a section of spare material see figure 1.

Fig.1: Cut-out Diameter



- Once the mounting hole has been cut to the correct diameter, the mains input power feed (Fig. 2) can be wired to the driver and dimming controls (DALI or 1-10V) (Fig. 3). These luminaires are Class II but are equipped with Earth provision should it be required.

Fig. 2: Mains input



You can help protect the environment. Please remember to respect the local regulations: hand in the non-working electrical equipment to an appropriate waste disposal centre. The packaging material is recyclable. Dispose of the packaging in an environmentally friendly manner and make it available for the recyclable material collection service.

Fig. 3: Dimming control input (DALI/1-10V)



- At this stage it would be advisable to ensure that the correct CCT value has been selected for the application: the options are either Warm White or Cool White, and these can be altered by means of a small slider switch. The switch is located behind the detachable 'twist-off' bezel (Figs. 4A & 4B) and is accessed under an integral cover, which must be carefully relocated afterwards to maintain the IP65 rating, refit the Bezel.

Fig. 4A: Switch Cover In Situ


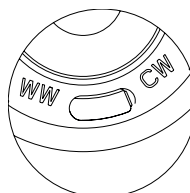


Fig. 4B: Switch Exposed

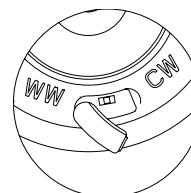

- Once the electrical connection has been made, and the colour temperature selected, the luminaire can now be inserted into the cut-out. Carefully push both spring clips up against the side of the luminaire and hold in place. Insert the V50™ downlight into the cut-out and release the clips to securely locate the product in place.

- When the luminaire is correctly installed the power may be switched on and the product can be tested.

Part B Fire Safety

The purpose of Part B is to ensure building structures provide adequate protection to personnel to allow the safe evacuation of a building structure/complex. The regulation has been a legal requirement since 1987. All Fire-rated fittings are tested for 30, 60 & 90 minute ceilings (selected I-Joist ceiling construction 30 & 60 minute compliant).

Part C Resistance to Contaminants and Moisture

The amount of moisture that can enter a cold roof void must be controlled; thus anything which punctures the seal between the cold roof area and dwelling area must be considered. Light fittings are a good example of intrusions into the roof area that can facilitate the passage of moisture. Fire-rated downlights have been designed with special seals to inhibit the flow of air & moisture through the fitting as required by Part C of the building regulations.


Part E Resistance to Sound

There is a general increase in the levels of background noise in a domestic environment. The Government has changed to the building regulations to ensure that reasonable noise attenuation can be expected between partition walls and ceilings not only between separate dwellings but also within individual residential area. The special gaskets incorporated into the Fire-rated design ensure that the criteria is met.

Part L Conservation of Fuel and Power




Part L has focused lighting installations on energy conservation. The requirement is for overall lighting design must achieve energy efficiency of >75Lm/W(domestic)>95Lm/W(commercial).

Profile & Dimensions

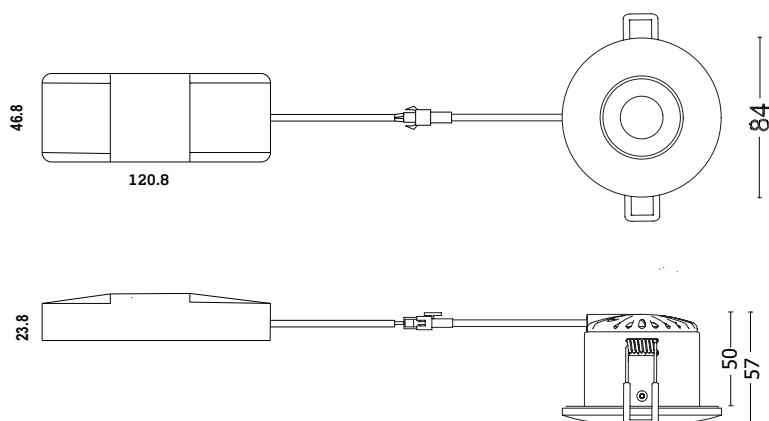

V50™ Standard DALI/1-10V

All dimensions in millimetres

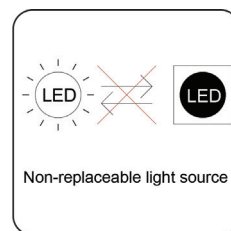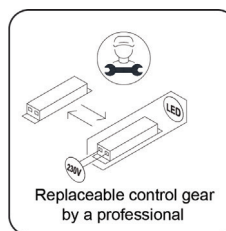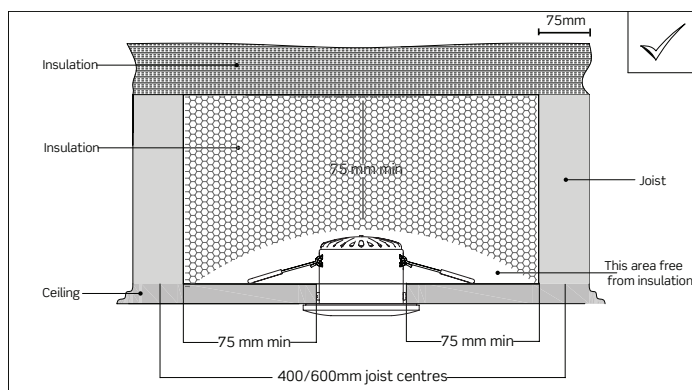

Important warranty information

V50™ DALI is supported by a 2-year standard warranty which will extend to 3-years for commercial applications or 5 years for domestic applications, if registered within the first year of purchase.

Please register at jcc.co.uk/warranty - Terms and conditions apply.

It remains the responsibility of the installer to ensure this product is suitable for its intended application, the product warranty will be void if installed in an area not suitable for this product.

The installer will be asked to provide the following information, which is detailed on a label attached to the luminaire's chassis: Product Code/Date Code.