

RadiaLED® Rapid Pro Slim Range

Installation instructions for RadiaLED® Rapid Pro Slim bulkhead



WARNINGS AND CAUTIONS


- To avoid electric shock ⚠ or serious injury or property damage, isolate power before installing, removing or servicing the product
- It is recommended that this product is installed by an electrician or a competent person with sufficient experience to install this product
- To be installed in accordance with the local current wiring regulations and standards
- Any broken or damaged parts should be replaced as soon as possible
- JCC will not accept responsibility for claims arising from sub-standard installations; which will void the warranty
- Ensure that you have the tools and accessories required to complete the installation correctly
- This luminaire is suitable for indoor use or exterior use, wall or ceiling mounting
- Do not install in areas that are near to continual running water
- Do not carry out insulation tests with this product connected to the circuit

INSTALLATION INSTRUCTIONS

ENGLISH


Mains supply Input : 220-240V~ 50/60Hz Class 2

Fig.1.

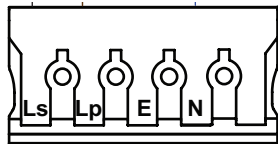


Ls = Switched live
Lp = Permanent Live
E = Earth Provision only
N = Neutral


Wattage Selectable	3 CCT Selectable	Lumens	Standard operation mode	Battery charging operation mode (Initial charge 24hrs)	Parasitic Power
8/12W	3000K/4000K/5700K	Up to 1300	8W	11W(8W+3W)	1W
12/18W	3000K/4000K/5700K	Up to 1850	12W	15W(12W+3W)	1W
			18W	21W(18W+3W)	1W

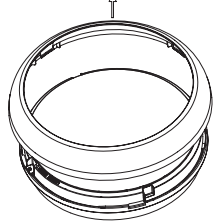


1. Pull upwards to decorative rim

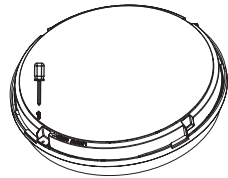


2. Loosen the security locking screw

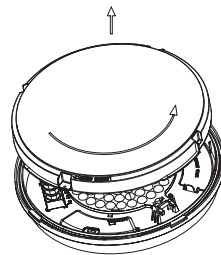


3. Rotate the diffuser anti-clockwise to remove

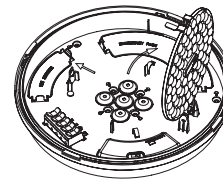


4. Unlock LED tray and lift up into position shown to access the cable input

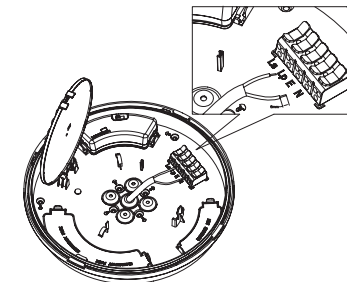


5. Feed cable through the grommet at the rear

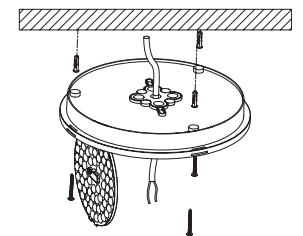


6. Secure the body to the ceiling or wall as illustrated above

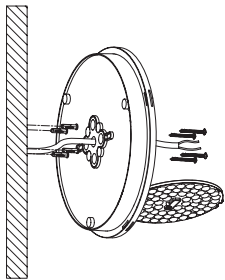


7. Alternatively fix using the BESA plate fixing holes in the centre of the body body to the ceiling or wall as illustrated above

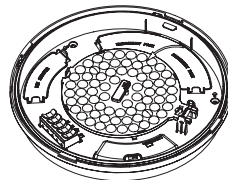


8. Once all electrical connections have been completed as shown in Fig.1. above, fold the LED Tray and clip into place

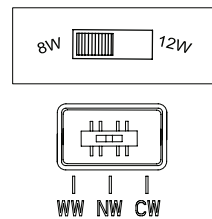


9. Select preferred CCT from the switch on the centre of the LED tray and Wattage using the switch on the top of the driver

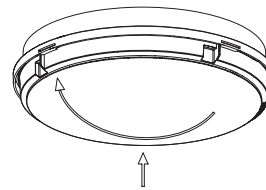

10. Refit the diffuser to the body and rotate clockwise to lock in place



11. Tighten the security locking screw

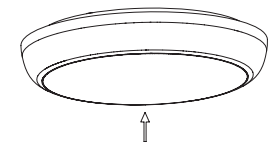

12. Replace the rim and push to secure into place, then turn on supply and test for correct operation

Microwave on/off operation and settings

Detection Area

I: Up to 3m
 II: Up to 2.25m
 III: Up to 1.5m
 VI: Up to 0.75m

On ↑ 		1	2	
	I	On	On	100%
	II	On	-	75%
	III	-	On	50%
	IV	-	-	25%

The distances above refer to ceiling mount,
 Wall mount maximum mounting height is 2m.

Hold Time

On ↑ 		3	4	
	I	On	On	5s
	II	On	-	90s
	III	-	On	5min
	IV	-	-	15min

Refers to the time period the lamp remains at 100% illumination after no motion detected.

Daylight Sensor

I: 2lux
 (Darkness operation only)
 II: 10lux
 (Darkness operation only)
 III: 25lux
 (Twilight operation)
 IV: 50lux
 (Twilight operation only)
 V: Disable*
 (Darkness operation only)

On ↑ 		5	6	
	I	On	On	Disable
	II	On	-	5Lux
	III	-	On	15Lux
	IV	-	-	50Lux








*When set to Disable mode, the daylight sensor will switch on the lamp when motion is detected regardless of ambient light levels.

Daylight Photocell operation and settings

ON ↑ 		1	2	3	4	5	6	ON	OFF		1	2	3	4	5	6	ON	OFF
	I	ON	ON	ON	ON	NA	NA	5Lux	55-105Lux	V	ON	-	ON	-	NA	NA	100Lux	150-250Lux
	II	ON	ON	ON	-	NA	NA	10Lux	60-110Lux	VI	ON	-	-	-	NA	NA	150Lux	200-300Lux
	III	ON	ON	-	ON	NA	NA	25Lux	75-125Lux	VII	-	ON	-	-	NA	NA	200Lux	250-350Lux
	IV	ON	ON	-	-	NA	NA	50Lux	100-150Lux	VIII	-	-	-	-	NA	NA	Disable	Disable

Profile & Dimensions

All dimensions in millimetres

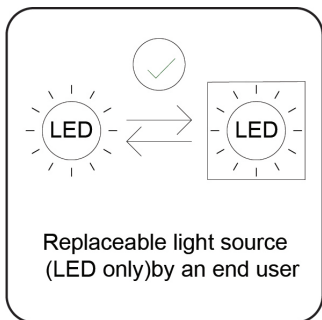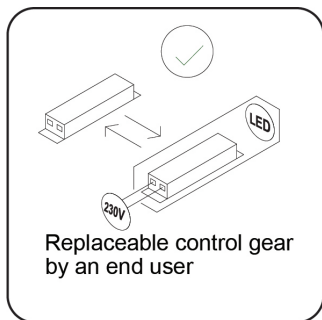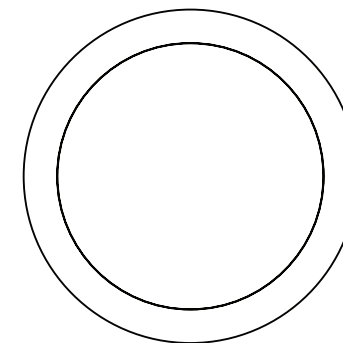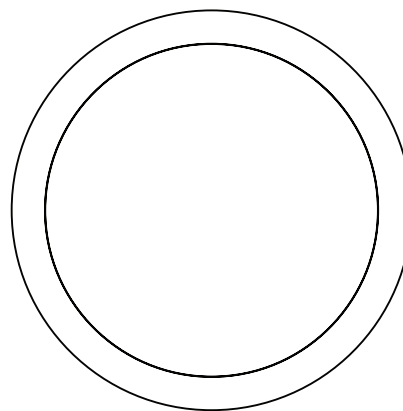

RadiaLED® Rapid Pro Slim EM Pack

Installation instructions for RadiaLED® Rapid Pro Slim EM Pack




WARNINGS AND CAUTIONS

- To avoid electric shock ⚠ or serious injury or property damage, isolate power before installing, removing or servicing the product
- It is recommended that this product is installed by an electrician or a competent person with sufficient experience to install this product
- To be installed in accordance with the local current wiring regulations and standards
- JCC will not accept responsibility for claims arising from sub-standard installations; which will void the warranty
- Ensure that you have the tools and accessories required to complete the installation correctly
- This emergency pack is only suitable for with RadiaLED Rapid Pro and Rapid Pro Slim range
- Do not carry out insulation tests with this product connected to the circuit
- Any broken or damaged parts should be replaced as soon as possible


INSTALLATION INSTRUCTIONS

ENGLISH

Standard version connections

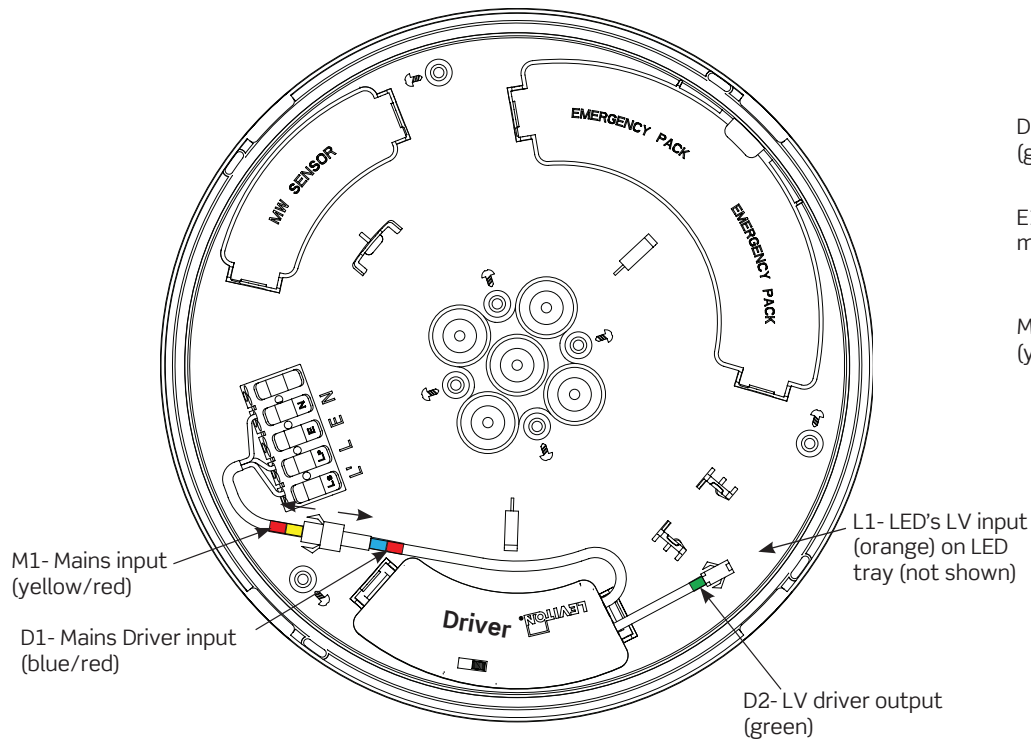

Standard Emergency version connections

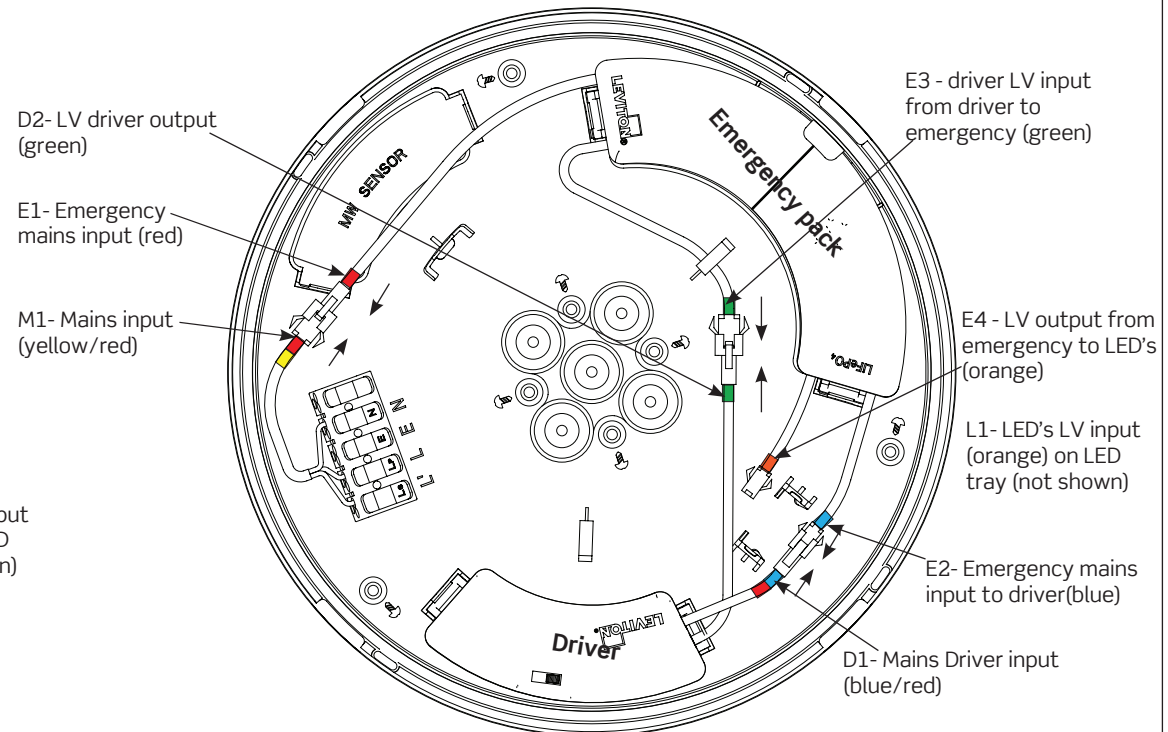


Mains supply Input : 220-240V~ 50/60Hz


CABLE CODE/COLOUR	ACTION	CABLE CODE/COLOUR
M1 - MAINS INPUT (YELLOW/RED)	DISCONNECT FROM	D1 - DRIVER INPUT (BLUE/RED)
D2 - DRIVER OUTPUT (GREEN)	DISCONNECT FROM	L1 - LED'S LV INPUT (ORANGE)

CABLE CODE/COLOUR	ACTION	CABLE CODE/COLOUR
M1 - MAINS INPUT (YELLOW/RED)	CONNECT TO	E1 - EM MAINS INPUT (RED)
D1 - DRIVER INPUT (BLUE/RED)	CONNECT TO	E2 - EM MAINS INPUT TO DRIVER (BLUE)
D2 - DRIVER LV OUTPUT (GREEN)	CONNECT TO	E3 - DRIVER LV INPUT TO EM (GREEN)
L1 - LED'S LV INPUT (ORANGE)	CONNECT TO	E4 - LV OUTPUT FROM EM (ORANGE)

Microwave/Photocell Standard version connections

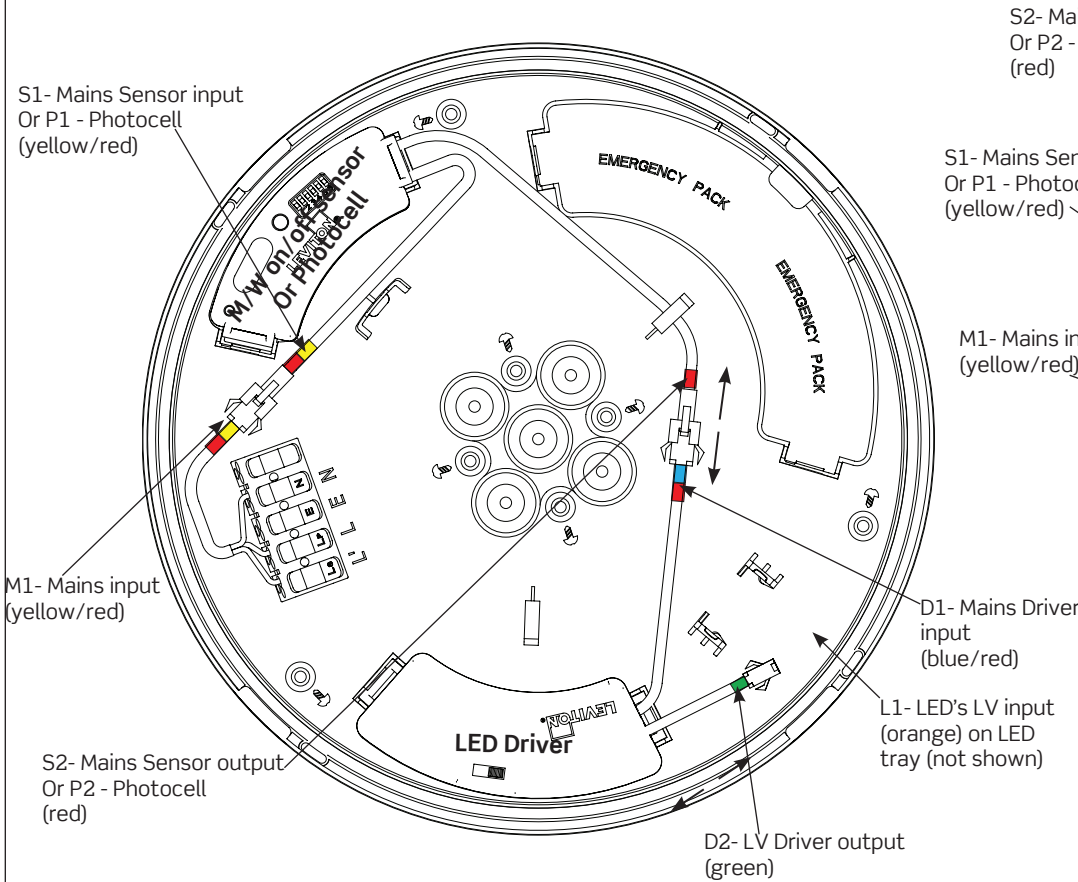

Microwave/Photocell Emergency version connections

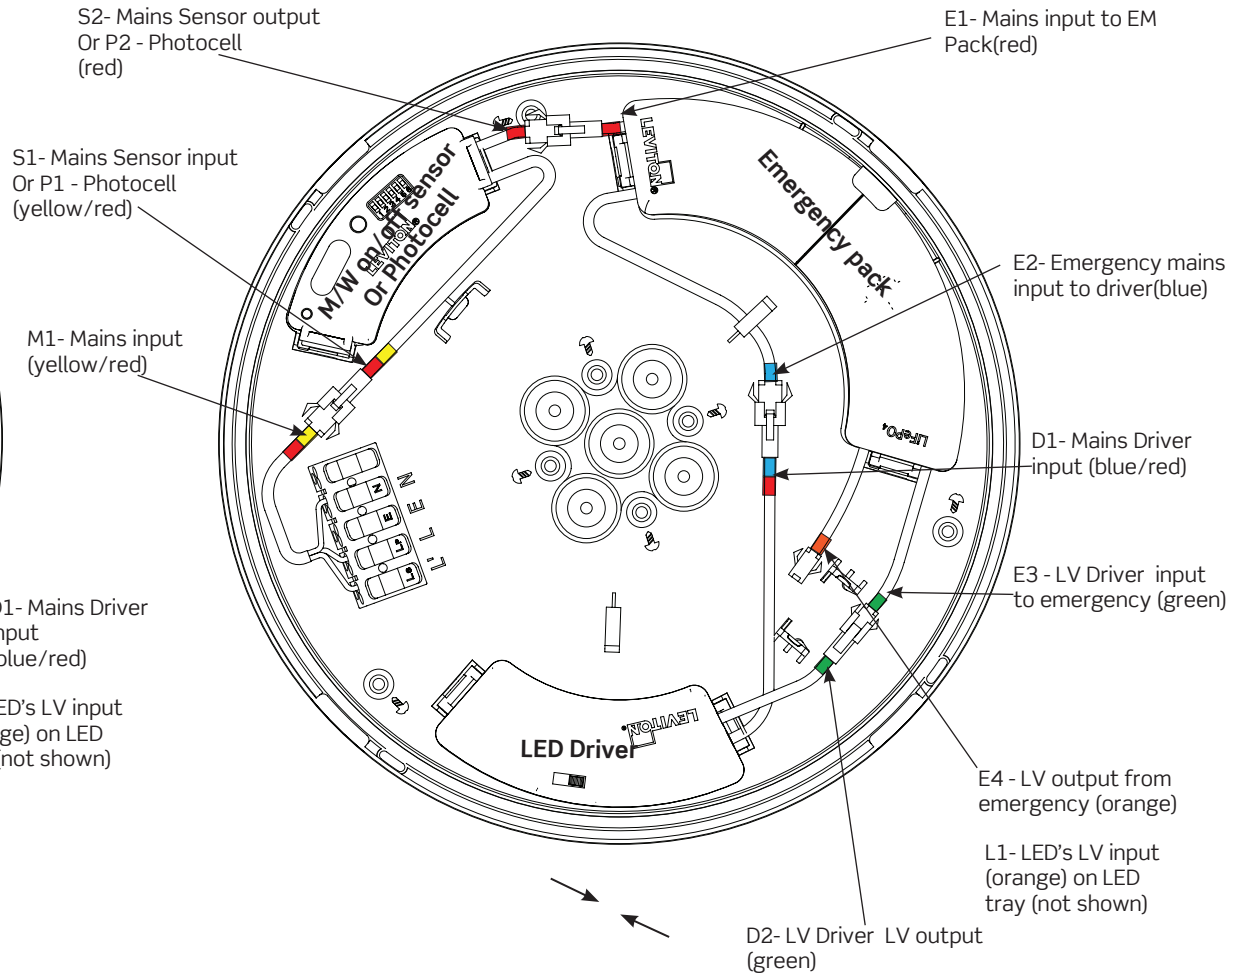

CABLE CODE/COLOUR	ACTION	CABLE CODE/COLOUR
M1- MAINS INPUT(YELLOW/RED)	LEAVE CONNECTED	S1- MAINS SENSOR INPUT(YELLOW/RED)(OR P1)
S2-MAINS SENSOR OUTPUT(RED)(OR P2)	DISCONNECT FROM	D1- DRIVER INPUT(BLUE/RED)
D2-DRIVER OUTPUT(GREEN)	DISCONNECT FROM	L1- LED'S LV INPUT(ORANGE)

CABLE CODE/COLOUR	ACTION	CABLE CODE/COLOUR
M1- MAINS INPUT(YELLOW/RED)	LEAVE CONNECTED	S1- MAINS SENSOR INPUT(YELLOW/RED)(OR P1)
S2-MAINS SENSOR OUTPUT(RED)	CONNECT TO	E1- MAINS INPUT TO EM PACK(RED)
D1- MAINS INPUT TO DRIVER(BLUE/RED)	CONNECT TO	E2- MAINS OUTPUT TO LED DRIVER(BLUE)
D2- DRIVER LV OUTPUT(GREEN)	CONNECT TO	E3- DRIVER LV INPUT TO EM(GREEN)
L1-LED'S LV INPUT(ORANGE)	CONNECT TO	E4-LV OUTPUT FROM EM(ORANGE)

Emergency range routine inspection and test

All tests must be undertaken at times of least risk and in accordance with EN 50172:2004 as indicated below:

Weekly: Indicators of central power supply shall be visually inspected for correct operation.

Monthly: (in addition to the daily check) If automatic testing devices are used, the results of the short duration tests shall be recorded. Test shall be carried out as follows:

- a) Switch the luminaire over to emergency mode to operate from the batteries by simulating a failure of supply to the normal lighting for a period sufficient to ensure correct luminaire operation

NOTE: The period of simulation failure should be sufficient for the purpose of this clause whilst minimizing damage to the system components e.g. lamps. During this period, all luminaires and signs shall be checked to ensure that they are present, clean and functioning correctly. At the end of this test period, the supply to the normal lighting should be restored and any indicator lamp or device should be checked to ensure that is showing that the normal supply has been restored.

Annually: If automatic testing devices are used, the results of the short duration tests shall be recorded. For all other systems the monthly inspection shall be carried out and the following additional tests made:

- a) Each luminaire and internally illuminated sign shall be tested monthly as above but for its full duration in accordance with the manufacturer's information.
- b) The normal supply for the luminaire should be restored and any charge indicator lamp or device should be checked to ensure that it shows the normal supply has been restored. The charging arrangements should be checked for proper functioning.
- c) The date of the test and its results shall be recorded in the system logbook.

A copy of this report must accompany any fitting returned to the manufacturer for any reason.

General Information

Our products are designed to comply with the requirements of UK law and the relevant industry national and international standards and should not be modified in any way. All emergency lighting systems should comply with the recommendations of BS5266-1: Code of Practice for the Emergency Lighting of Premises and be installed by competent engineers in accordance with the relevant wiring regulations. Before installing any type of Emergency Lighting always seek the advice and approval of the local Fire Prevention Officer (or equivalent authority).

Maintenance

Failed or faulty light sources connected to this equipment should be replaced immediately. These units are designed especially for a long and trouble free life. Under normal conditions, will require no routine maintenance or service beyond the inspection and test regime of BS5266-1. Both mains supply and battery protection fusing is incorporated internally. Should access to these or any other part of the circuitry be required this must be undertaken only by suitably qualified person. Special care must be taken when removing the cover to circuitry and battery. Only replacement components authorised by the company must be used. Disposal of replaced components should be in accordance with the component manufacturers instructions.

You can help protect the environment. Please remember to respect the local regulations: hand in the non-working electrical equipment to an appropriate waste disposal centre. The packaging material is recyclable. Dispose of the packaging in an environmentally friendly manner and make it available for the recyclable material collection service.

Important warranty information

This product is supported by a 2-year standard warranty which will extend to 5-years if registered within the first year of purchase. (5 year on batteries). Please register at jcc.co.uk/warranty (Terms and conditions apply).

The installer will be asked to provide the following information, which is detailed on a label attached to the luminaire's chassis: Product Code/Date Code.

Emergency test record sheet

Month	Test Type	First Year		Second Year		Third Year		Fourth Year		Fifth Year	
		Sign	Date	Sign	Date	Sign	Date	Sign	Date	Sign	Date
January	Functional										
February	Functional										
March	Functional										
April	Functional										
May	Functional										
June	Functional										
July	Functional										
August	Functional										
September	Functional										
October	Functional										
November	Functional										
December	3 hour										



CE UK CA IP65 jcc.co.uk V2_September_2024_RS