Emergency Range

Installation instructions for JC50302 Emergency Exit Blade

Warnings & Cautions

- To avoid electric shock, serious injury or property damage, isolate power before installing, removing or servicing the product.
- It is recommended that luminaires are installed by a qualified electrician to ensure the installation complies with the local current wiring regulations.
- It may be necessary to upgrade your MCBs to allow for increased inrush current.
- This product is designed for connection to a 220-240V~ 50/60Hz supply.
- It is recommended that the ambient room temperature should not exceed 30°C.

- a LEVITON company
- Read instructions and check that you have all of the tools and accessories required to complete the installation correctly. Isolate power supply before starting installation.
- Do not carry out insulation tests with the product connected to the circuit.
- Any broken or damaged parts should be replaced as soon as possible.
 JCC will not accept responsibility for claims arising from sub-standard installations; which will void the warranty.
- This luminaire is for indoor use only.
- All testing should be carried out in accordance to EN 50172:2004.

INSTALLATION

ENGLISH

220-240V~ 50/60Hz - Class II 🔲

Light source: Integral LED
Total circuit Wattage: 2.8W(AC)
Total circuit Wattage: 2.88W(DC)
Luminous flux: 46 lumens(AC)
Luminous flux: 46 lumens(DC)
Efficacy: 16 LpcW(AC)
Efficacy: 78

Maintained(3M) + Light on 24/7

U/sw Live: Brown
Neutral: Blue

Non-Maintained(3NM) + Light off 24/7

For non-maintained operation remove jumper as instructed on


+ Emergency circuit board.

Installation

- 1. To remove the back cover press the tabs at each end to release.
- Cable entry is available through the rear only.
- 3. Use the back plate as a template to mark for holes to securing the fitting, ensuring suitable fixings are used for the intended location.
- 4. For wall or ceiling mounting ensure that the cable entry is on the left and that the fitting is mounted with the test button and indicator light facing forward to the right hand side.
- 5. For wall mouting, this will ensure that the fitting lays 90° to the wall surface and the blade in a vertical position.
- Connect the mains input supply as indicated above as per the required operation.
- 7. Connect the emergency battery leads to the circuit board (top right hand corner next to the batteries).
- 8. For non-maintained operation, remove jumper as instructed on circuit board.
- Refit the body to the base.
- 10. Using the 4 press clips supplied, fit the two corresponding legends to the blade to suit the application.
- 11. Switch on mains supply and test for operation (allow 24hrs for batteries to charge).
- 12. Familiarise yourself with the enclosed emergency fittings test record sheet and ensure it is completed as required and left with the end user.

Function test

- 1. With mains supply on and green indicator light on, press the Test button to check function.
- 2. Green indicator light will go off and the fitting will operate in emergency mode.
- 3. Release the button and the inidcator light will come on and the fitting will then return to previous operation.

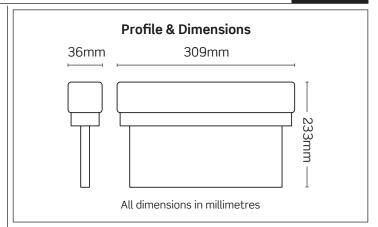


Legends not supplied

Available legends to order:


JC50308 - 1 x left & 1 x right running man

JC50310 - 2 x Down running man

JC50311 - 2 x Up running man

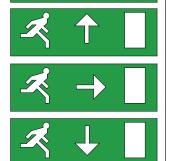



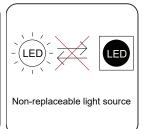



Important warranty information

This product is supported by a 2-year standard warranty which will extend to 3 years if registered within the first year of purchase. (2 year on batteries). Please register at jcc.co.uk/warranty - Terms and conditions apply.

The installer will be asked to provide the following information, which is detailed on a label attached to the luminaire's chassis: Product Code/Date Code.

Eilleigelicy			
Installation Engineers:	Tel:		
	Batch Number:		
Location:	Installation Date:		

General Information

These instructions contain important information regarding safety. They should be read carefully and retained at the installation for future reference. The company will not accept any responsibility for any injury, damage or loss that may arise as a result of incorrect installation, operation or maintenance due to the non-adherance to these instructions. Our products are designed to comply with the requirements of UK law and the relevant industry national and international standards and should not be modified in any way. All emergency lighting systems should comply with the recommendations of BS5266-1: Code of Practice for the Emergency Lighting of Premises and be installed by competent engineers in accordance with the relevant wiring regulations. Before installing any type of Emergency Lighting always seek the advice and approval of the local Fire Prevention Officer (or equivalent authority).

Maintenance

Failed or faulty light sources connected to this equipment should be replaced immediately. These units are designed especially for a long and trouble free life and, under normal conditions, will require no routine maintenance or service beyond the inspection and test regime of BS5266-1. Both mains supply and battery protection fusing is incorporated internally. Should access to these or any other part of the circuitry be required this must be undertaken only by suitably qualified personel. Special care must be taken when removing the cover to circuitry and battery. Only replacement components authorised by the company must be used. Disposal of replaced components should be in accordance with the component manufacturers instructions.

Routine Inspection and Test

All tests must be undertaken at times of least risk and in accordance with EN 50172:2004 as indicated below:

Daily: Indicators of central power supply shall be visually inspected for correct operation.

Monthly: (in addition to the daily check)

If automatic testing devices are used, the results of the short duration tests shall be recorded.

Test shall be carried out as follows:

a) Switch on in the Emergency mode each luminaire and each internally illuminated exit sign from its battery by simulation of a failure of supply to the normal lighting for a period sufficient to ensure that each lamp is illuminated.

NOTE: The period of simulation failure should be sufficient for the purpose of this clause whilst minimising damage to the system components e.g lamps During this period, all luminaires and signs shall be checked to ensure that they are present, clean and functioning correctly. At the end of this test period, the supply to the normal lighting should be restored and any indicator lamp or device should be checked to ensure that is showing that the normal supply has been restored.

Annually:

If automatic testing devices are used, the results of the short duration tests shall be recorded. For all other systems the monthly inspection shall be carried out and the following additional tests made:

- a) each luminaire and internally illuminated sign shall be tested Monthly as above but for its full duration in accordance with the manufacturer's information;
- b) the supply of the normal light shall be restored and any indicator lamp or device checked to ensure that it shows the normal supply has been restored. The charging arrangements should be checked for proper functioning:
- c) the date of the test and its results shall be recorded in the system logbook.
- A copy of this report must accompany any fitting returned to the manufacturer for any reason.

Month	Test Type	First Year		Second Year		Third Year		Fourth Year		Fifth Year	
		Sign	Date	Sign	Date	Sign	Date	Sign	Date	Sign	Date
January	Functional										
February	Functional										
March	Functional										
April	Functional										
May	Functional										
June	Functional										
July	Functional										
August	Functional										
September	Functional										
October	Functional										
November	Functional										
December	3 hour										