


# Installation Instructions

## Netherton Linear High Bay


<b>Input</b>	120–240V AC 50/60Hz
<b>Power</b>	80W/120W/160W/200W
<b>Operating Temp</b>	-30°C-+40°C
<b>Connection Type</b>	Flying Lead
<b>Emergency Option</b>	430964 (Sold Separately)
<b>Control Connection</b>	Zhaga B18
<b>Light Source Energy Rating</b>	B



truSmart  
Enabled



Professionally  
Replaceable



Professionally  
Replaceable



Class  
I



Ingress  
Protection

### Box Contents:

- Netherton Linear High Bay
- Suspension Kit (2pc)


### Tools Required For Installation:

- Wire Strippers / Cutters



### Dimensions:

Part No.	Description	L (mm)	W (mm)	H (mm)	Weight
431181	Netherton 80W	645	102	100	2.25Kg
431182	Netherton 120W	876	102	100	2.96Kg
431183	Netherton 160W	1107	102	100	3.42Kg
431184	Netherton 200W	1107	102	100	3.56Kg

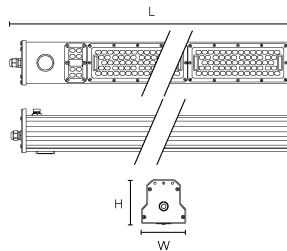

### End Of Life Disposal:

Disassembly instructions for end of life disposal available on website.  
 Disposal of Electronic Equipment WEEE Directive 2002/96/EC This product falls within the scope of the Waste Electrical & Electronic Equipment Directive (WEEE), which means the product should not be disposed of as normal household waste. Please recycle where facilities exist or check with your Local Authority. RoHS - All components and materials used in this product are RoHS 2002/95/EC compliant. Specifications may change from time to time. The information contained in this leaflet is for guidance only and should not be considered as always accurate and should be treated as not representative.

**READ THESE INSTRUCTIONS THOROUGHLY BEFORE INSTALLATION**

**KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.**

**IMPORTANT:**

This product must be installed by a qualified electrician or competent person, and in accordance with current building and IET wiring regulations.

### Warranty:

This luminaire is warranted for a period of 5 Years from the date of purchase\*\*. The warranty could be invalidated should the light fitting not be installed according to these instructions, outside the scope of the specification or the product has been altered or tampered with in any way. Please see website for terms and conditions.



**WARNING: Risk of electric shock!**  
**Isolate the mains power before proceeding.**

- Turn off the mains power before performing inspections, installation, or removal
- Verify that the supply voltage is correct by comparing it with the luminaire label information
- It is the installers responsibility to ensure installation is suitable for the total load of the luminaire(s). The supply cable, fuses/circuit breakers must be correctly rated for the electrical load and considering for any transient inrush currents that may occur.
- Do not perform insulation strength or resistance tests on installed luminaire(s) connected

**Wiring instructions for units equipped with EMERGENCY function:**

Emergency lighting luminaire must be installed and maintained in accordance with the emergency lighting standard BS 5266-1

- For the emergency unit to work correctly, please ensure that an uninterrupted permanent live feed is present and is connected directly to the 'Permanent Live' terminal of the mains terminal block. Please ensure there are no switches, PIRs etc within the permanent live feed, constant switching of the emergency pack could result in premature battery failure.
- Following power up the green LED indicator should illuminate to indicate charging. If power to the unit is disrupted or isolated, the unit indicating green LED will switch off, triggering the emergency LEDs to illuminate.
- When self-test mode is selected, 24hrs from connection to mains power, a 3hrs duration test will be performed automatically.

**Installation Procedure:**

1. Thread suspension wire through end caps.
2. Attach suspension wires to suitable structure.
3. Press the lock (1) and pull wire through and adjust the height on both sides until required height is reached.
4. Ensure security end stop is moved towards the lock (1).
5. Connect mains cable as per image, using suitable IP rated junction box And connector such as Wago 222.
6. Reconnect the mains supply.

